

4" DESKTOP LABEL PRINTER

## MODEL : LK-BXX Series



### Command Reference

This section contains a complete listing of all commands in alphabetical order.



**Disposal of Old Electrical&Electronic Equipment(Applicable in the European Union and other European countries with separate collection systems)**

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronics equipment. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

No.	Command	Description	Page
1	A	ASC II Text	4
2	AUTOFR	Automatic Form Printing	9
3	B	Bar Code	11
4	B	RSS-14 Bar Code	16
5	b	Data Matrix MaxiCode PDF417	20
6	C	Counter	37
7	C	Cut Immediate	39
8	D	Density	40
9	EI	Print Soft Font Info.	43
10	EK	Delete Soft Font	44
11	eR	User Definable Error Response	42
12	ES	Store Soft Font	45
13	f	Cut/Peel Position	50
14	FE	End Form Store	51
15	FI	Print Form Info.	52
16	FK	Delete Form	53
17	FR	Retrieve Form	54
18	FS	Store Form	55-56
19	GG	Retrieve Graphics	57
20	GI	Print Graphics Info.	58
21	GK	Delete Graphic	59
22	GM	Store Graphic	60-61
23	GW	Direct Graphic Write	62
24	I	Character Set Selection	63-64
25	JB	Disable Top Of Form Backup	65
26	JC	Disable Top Of Form Backup –All Cases	66
27	JF	Enable Top Of Form Backup	67
28	LE	Line Draw Exclusive OR	68
29	LO	Line Draw Black	69
30	LS	Line Draw Diagonal	70
31	LW	Line Draw White	71
32	M	Memory Allocation	72
33	N	Clear Image Buffer	73
34	o	Cancel Customized Settings	74
35	oB	Cancel Customize Bar Code	75
36	oE	Line Mode Font Substitution	76
37	oH	Macro PDF Offset	77-78
38	oM	Disable Initial Esc Sequence Feed	79

No.	Command	Description	Page
39	oR	Character Substitution(Euro)	80-81
40	oW	Customize Bar Code Parameters	82-83
41	O	Options Select	84-85
42	OEPL1	Set Line Mode	86
43	P	Print	87
44	PA	Print Automatic	88
45	Q	Set Form Length Transmissive(Gap)Sensor Black Line Sensor Continuous Stock	89-90
46	q	Set Form Width	91-94
47	r	Set Double Buffer Mode	95
48	R	Set Reference Point	96
49	S	Speed Select	97
50	TD	Define Date Layout(& Print Date)	98
51	TS	Set Real Time Clock	99
52	TT	Define Time Layout(& Print Time)	100
53	U	Print Configuration	101
54	UA	Enable Clear Label Counter Mode	102
55	UB	Reset Label Counter Mode	103
56	UE	External Font Information Inquiry	104
57	UF	Form Information Inquiry	105
58	UG	Graphic Information Inquiry	106
59	UI	Host Prompts/Codepage Inquiry	107
60	UM	Codepage& Memory Inquiry	108
61	UN	Disable Error Reporting	109
62	UP	Codepage& Memory Inquiry/Print	110
63	UQ	Configuration Inquiry	111
64	US	Enable Error Reporting	112-115
65	V	Define Variable	116
66	W	Windows Mode	117
67	xa	Sense Media	118
68	X	Box Draw	119
69	Y	Serial Port Setup	120
70	Z	Print Direction	121
71	?	Download Variables	122
72	^ @	Reset Printer	123
73	^ default	Set Printer to Factory Defaults	124
74	^ ee	Status Report – Immediate	125

## A Command - ASCII Text

**Description** Prints an ASCII text string.

**Syntax** **A****p**<sub>1</sub>**,****p**<sub>2</sub>**,****p**<sub>3</sub>**,****p**<sub>4</sub>**,****p**<sub>5</sub>**,****p**<sub>6</sub>**,****p**<sub>7</sub>**,****"DATA"**

**Parameters** **p**<sub>1</sub> = Horizontal start position (X) in dots.

**p**<sub>2</sub> = Vertical start position (Y) in dots.

**p**<sub>3</sub> = Rotation

Value	Description
0	No rotation
1	90 degrees
2	180 degrees
3	270 degrees

**p**<sub>4</sub> = Font selection

Value	Description	
	203 dpi	300 dpi
1	20.3 cpi, 6 pts, (8 x 12 dots)	25 cpi, 4 pts, (12 x 20 dots)
2	16.9 cpi, 7 pts, (10 x 16 dots)	18.75 cpi, 6 pts, (16 x 28 dots)
3	14.5 cpi, 10 pts, (12 x 20 dots)	15 cpi, 8 pts, (20 x 36 dots)
4	12.7 cpi, 12 pts, (14 x 24 dots)	12.5 cpi, 10 pts, (24 x 44 dots)
5	5.6 cpi, 24 pts, (32 x 48 dots)	6.25 cpi, 21 pts, (48 x 80 dots)
A - Z	Reserved for Soft Fonts	Reserved for Soft Fonts

Fonts 1 - 5 are fixed pitch.

**p**<sub>5</sub> = Horizontal multiplier, expands the text horizontally. Values: 1, 2, 3, 4, 5, 6, & 8.

**p**<sub>6</sub> = Vertical multiplier, expands the text vertically. Values: 1, 2, 3, 4, 5, 6, 7, 8, & 9.

**p**<sub>7</sub> = **N** for normal or **R** for reverse image

**"DATA"** = Represents a fixed data field.

## A Command - ASCII Text


The backslash (\) character designates the following character is a literal and will encode into the data field. Refer to the following examples:

To Print	Enter into data field
"Company"	\ "Company\"
\	\\
\code\	\\code\\

**Examples:**

```
N
A50,0,0,1,1,1,N,"Example 1"
A50,50,0,2,1,1,N,"Example 2"
A50,100,0,3,1,1,N,"Example 3"
A50,150,0,4,1,1,N,"Example 4"
A50,200,0,5,1,1,N,"EXAMPLE 5"
A50,300,0,3,2,2,R,"Example 6"
P1
```

**Will Produce:**

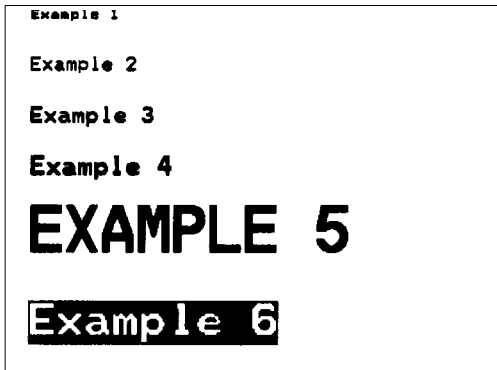

As shown in example 5 above, font 5 only supports upper case characters. Refer to Appendix A for a complete listing of available fonts and character sets supported.



Use the **LE** command to create reverse print text instead of the **"R"** in the **A** command parameter **p**<sub>7</sub>. This is the recommend method because it provides the best size, position and centering of the black line (rectangle) bordering the reversed text.

## A Command - ASCII Text

**Variable Data and Counter Functions** The “**Data**” field can be replaced by or combined with the following commands:

**Vnn**= Prints the contents of variable “**nn**” at this position where **nn** is a 2 digit number from 00 to 99. See the **V** command, page 3-116

**Cn**= Prints the contents of counter “**n**” at this position where **n** is a one digit number from 0 to 9. See the **C** command, page 3-37.

**Example:** A50,0,0,1,1,1,N,"DATA" ↵ : Writes Text  
A50,50,0,2,1,1,N,V01 ↵ : Writes contents of variable 01  
A50,100,0,3,1,1,N,C1 ↵ : Writes contents of counter 1  
A50,100,0,3,1,1,N,C1+2 ↵ : Writes contents of counter 1 plus 2

**Data with the RTC Time & Date Functions** The “**Data**” field can be replaced by or combined with the following variables:

**TT** = Prints the current time at this position in the predefined format. See the **TT** command for format selection. This variable is available only if the printer Time & Date option is installed.

**TD** = Prints the current date at this position in the predefined format. See the **TD** command for format selection. This variable is available only if the printer Time & Date option is installed.

**Examples:** A50,150,0,4,1,1,N,TT ↵ : Writes current time  
A50,200,0,5,1,1,N,TD ↵ : Writes current date

or a combination of several options:

A50,300,0,3,2,2,R,"Deluxe"V01C2"Combo"TDV01TT ↵

:Writes the text “Deluxe” followed by the contents of variable 01 followed by the contents of counter 2 followed by the text “Combo” followed by the current date followed by the contents of variable 01 followed by the current time.

## A Command - ASCII TEXT

**Simple Expressions in Data Fields** An advanced function of the **A** command allows addition and subtraction to be performed on constant and variable values in flash printers.

**Syntax** **Ap<sub>1</sub>.p<sub>2</sub>.p<sub>3</sub>.p<sub>4</sub>.p<sub>5</sub>.p<sub>6</sub>.p<sub>7</sub>,"DATA"[p<sub>8</sub>p<sub>9</sub>p<sub>10</sub>...]**

**Parameters** For the **p<sub>1</sub>** - **p<sub>7</sub>** and “**DATA**” parameters - See first page of **A** command, page 3-4.

**p<sub>8</sub>** = Required. Must be a variable data field number, e.g. V00, V01 etc.

**p<sub>9</sub>** = Required. Operator, + or -

**p<sub>10</sub>** = Required. Variable data field number or constant value.

### Valid Number Ranges:

Constant = 0 to 2147483647

Variable = 0 to 2147483647

Result = -2147483648 to 2147483647

- ☐ The Expression must start with a variable field.
- ☐ The character field length defined for the first variable in the expression will be used to format the result. If the result is of a greater length than the defined character length, then the result field will contain ‘X’s.
- ☐ A syntax error will be generated during form storage if the constant value is too large.
- ☐ If an error occurs during the evaluation of the expression, the resultant field will be filled with ‘X’s.

## A Command - Simple Expressions in Data Fields

### Example:

```
FK"1" ↵
FK"1" ↵
FS"1" ↵
V00,10,N,"Enter current mileage" ↵
A100,100,0,4,1,1,N,"Current mileage is "V00" miles." ↵
A100,200,0,4,1,1,N,"Change oil at "V00+3000" miles." ↵
FE ↵
↵
FK"2" ↵
FK"2" ↵
FS"2" ↵
V00,10,N,"Enter current mileage." ↵
V01,10,N,"Enter interval mileage." ↵
A100,100,0,4,1,1,N,"Current mileage is "V00" miles." ↵
A100,200,0,4,1,1,N,"Mileage interval is "V01" miles." ↵
A100,200,0,4,1,1,N,"Change oil at "V00+V01" miles." ↵
FE ↵
↵
FK"3" ↵
FK"3" ↵
FS"3" ↵
V00,10,N,"Enter value 1." ↵
V01,10,N,"Enter value 2." ↵
V02,10,N,"Enter value 3." ↵
A100,200,0,4,1,1,N,"Answer: "V01+123+V00-10-V02" ↵
FE ↵
```

### Asian Character Font Sets

The flash based printers support up to five Asian language character (ideogram) sets. Asian language support is an optional feature and requires a special version of the printer (PCBA) to support the large Asian character sets.

The Asian character maps and special features of the **A** command that support the character sets can be found in a separate publication or on our Asian Desktop printer CD ROM.

For Asian language firmware updates, publications and support options see:

[www.zebra.com](http://www.zebra.com)

## AUTOFR Command - Automatic Form Printing

**Description** This special form process allows you to detach the printer from the computer and print in a standalone mode. The EPL2 printer reserves the form name **AUTOFR** to allow the printer to automatically start a form when the printer is initialized power-up. This feature can be used in many ways, that include the following:

- Feed a single label in peel mode and print multiple labels set to the number of labels on the roll.
- Have a form with a variable and enter the variable with a scanner, terminal, weight scale, circuit analyzer or any other device capable of sending ASCII character data.

*Mobile printers, such as the TR 220, ignore this command.*

**Using AUTOFR** Download a form to the printer with the name **AUTOFR**.

### Example:

↵	:Line Feed to initialize the printer
FK"AUTOFR" ↵	:Form Kill (delete any existing AUTOFR)
FS"AUTOFR" ↵	:Form Save (save file from here to FE at the bottom)
V00,8,L,"" ↵	:Variable field definition
Q254,20 ↵	:Label height followed by gap width
S2 ↵	:Speed (2ips)
D7 ↵	:Density setting
ZB ↵	:Print direction (ZT flips it 180 degrees)
A340,20,0,4,1,2,N,"QUANTITY" ↵	:Fixed text line
B265,75,0,3,2,4,101,B,V00 ↵	:Bar code definition
PA1 ↵	:Print 1 Label Automatically *
FE ↵	:Form End (Line Feed)

\* - If using the CAL TOOLS, CAL WIN, etc. programs to generate label files (files with .ejf extensions), then the **PA** command must be added manually by editing the .ejf file.

## AUTOFR - Automatic Form Printing Feature



**AUTOFR** treats any incoming data as a variable intended for printing. This means if you send the printer a memory partition command, the label will print, if you send a delete command - the label will print! So, while you are testing **AUTOFR** it is best to use another name for the form. Once you are satisfied with the form, rename it **AUTOFR** before you download it. There is no need to specify a file extension.

**Isolating Data From the Input Device** Place the printer in the diagnostic dump mode and send from your data input device.

- All characters the device sends will be printed on the label.
- If nothing prints, nothing is arriving - check pin-outs and serial settings.

**Disabling AUTOFR** Send a XOFF data character (13 hex. or ASCII 19) or a NUL (00 hex. or ASCII 0) to the printer.

The form may now be deleted from the printer.

**Removing AUTOFR** The programmer must send a Delete Form - **FK** command to the printer after disabling **AUTOFR**.

**Example:** FK"AUTOFR"  
FK"AUTOFR"

## B Command - Bar Code

**Description** Use this command to print standard bar codes.

**Syntax** **B****p<sub>1</sub>,p<sub>2</sub>,p<sub>3</sub>,p<sub>4</sub>,p<sub>5</sub>,p<sub>6</sub>,p<sub>7</sub>,p<sub>8</sub>**,"**DATA**"

**Parameters** **p<sub>1</sub>** = Horizontal start position (X) in dots

**p<sub>2</sub>** = Vertical start position (Y) in dots.

**p<sub>3</sub>** = Rotation

Value	Description
0	No rotation
1	90 degrees
2	180 degrees
3	270 degrees

**p<sub>4</sub>** = Bar Code selection (see Table 2-1 on next page).

**p<sub>5</sub>** = Narrow bar width in dots. (see Table 2-1 on next page).

**p<sub>6</sub>** = Wide bar width in dots.  
Acceptable values are 2-30.

**p<sub>7</sub>** = Bar code height in dots.

**p<sub>8</sub>** = Print human readable code.  
Values: **B**=yes or **N**=no.

**"DATA"** = Represents a fixed data field. The data in this field must comply with the selected bar code's specified format.

The backslash (\) character designates the following character is a literal and will encode into the data field. Refer to the following examples:

To Print	Enter into data field
"	\"
"Company"	\ "Company\"
\	\\
\code\	\\code\\

## B Command - Bar Code

### Bar Codes

Description	P4 Value	P5 Value
Code 39 std. or extended	3	1-10
Code 39 with check digit	3C	1-10
Code 93	9	1-10
Code 128 UCC Serial Shipping Container Code	0	1-10
Code 128 auto A, B, C modes	1	1-10
Code 128 mode A	1A	1-10
Code 128 mode B	1B	1-10
Code 128 mode C	1C	1-10
Codabar	K	1-10
EAN8	E80	2-4
EAN8 2 digit add-on	E82	2-4
EAN8 5 digit add-on	E85	2-4
EAN13	E30	2-4
EAN13 2 digit add-on	E32	2-4
EAN13 5 digit add-on	E35	2-4
German Post Code	2G	3-4
Interleaved 2 of 5	2	1-10
Interleaved 2 of 5 with mod 10 check digit	2C	1-10
Interleaved 2 of 5 with human readable check digit	2D	1-10
Postnet 5, 9, 11 & 13 digit <sup>1</sup>	P	—
Planet 11 & 13 digit <sup>1</sup>	PL	—
Japanese Postnet	J	—
UCC/EAN 128 <sup>2</sup>	1E	1-10
UPC A	UA0	2-4
UPC A 2 digit add-on	UA2	2-4
UPC A 5 digit add-on	UA5	2-4
UPC E	UE0	2-4
UPC E 2 digit add-on	UE2	2-4
UPC E 5 digit add-on	UE5	2-4
UPC Interleaved 2 of 5	2U	1-10
Plessey (MSI-1) with mod. 10 check digit	L	—
MSI-3 with mod. 10 check digit	M	—

1. Hyphens maybe used in data, as a data separator and will be ignored.

2. Use ASCII 06 to delimit variable length fields.

## B Command - Bar Code

Example:   
 N   
 B10,10,0,3,3,7,200,B,"998152-001"   
 P1

Will Produce:



**Bar Codes with Variables & Counters** The data field can be replaced by or combined with the following commands:

**Vnn** = Prints the contents of variable “nn” at this position. Range of nn = 00 to 99.

**Cn** = Prints the contents of counter “n” at this position. Range of n = 0 to 9

See Appendix C for additional **Data** parameters for printers with the RTC (real time clock) option installed.

**Examples:** B50,0,0,3,1,2,50,B,"DATA" : Writes bar code   
 B50,50,0,3,1,2,50,N,V01 : Writes contents of variable 01 as bar code   
 B50,50,0,3,1,2,50,N,C1 : Writes contents of counter 1 as bar code   
 B50,50,0,3,1,2,50,N,C1+2 : Writes contents of counter 1 plus 2 as bar code

or a combination of several options:

B50,300,0,3,1,2,50,B,"Deluxe"V01C2"Combo"V01 : Writes the text "Deluxe" followed by the contents of variable 01 followed by the contents of counter 2 followed by the text "Combo" followed by the contents of variable 01 all as a code 39 bar code.



## B Command - Bar Code

**Data with the RTC Time & Date Functions** The “**Data**” field can be replaced by or combined with the following variables:

**TT** = Prints the current time at this position in the predefined format. See the **TT** command for format selection. This variable is available only if the printer Time & Date option is installed.

**TD** = Prints the current date at this position in the predefined format. See the **TD** command for format selection. This variable is available only if the printer Time & Date option is installed.



Some bar code formats will not support date names or the date or time delimiters used by the printer to separate data parameters.

**Code 128 Bar Code Function Characters** The printer supports code 128 function control characters (**FCN#**). Multiple **FCN#**s, **TT**s, **TD**s and “**DATA**” strings can be concatenated, allowing them to be inserted anywhere within the symbol.

**FCN2, FCN3 and FCN4** are illegal in code 128 mode C (**p4** = 1C) and will result in a syntax error.

Please refer to the Code 128 standard for a description of function characters **FNC1** through **FNC3**.

“Standard” Code 128 can encode all 128 standard ASCII characters (0-127). Function character **FCN4** provides a means of also encoding extended ASCII characters (128-255). It directs the reader to add 128 to the value of each affected character before transmitting it.

Two consecutive **FCN4**s toggle between standard and extended ASCII mode for all succeeding data characters (until the end of the symbol, or until another pair of s is encountered). This is referred to as latching into extended ASCII mode or latching into standard ASCII mode.

## B Command - Bar Code

**Code 128 Bar Code Function Characters (continued)** A single **FCN4** toggles between standard and extended ASCII mode for only a single following data character. This is referred to as shifting into extended ASCII mode or shifting into standard ASCII mode.

Both code sets A and B are needed to represent the entire extended ASCII character set, just as both sets are needed to represent the standard ASCII character set.

**FCN4**s can be inserted manually, if necessary or desired, by following the syntax described above. The printer will, however, insert them automatically if extended ASCII characters are encountered in the DATA. It will do so in the most efficient manner possible:

- If up to 4 contiguous extended ASCII characters are encountered, it will shift into extended ASCII mode by inserting a single **FCN4** before each one;
- If 5 or more contiguous extended ASCII characters are encountered, it will latch into extended ASCII mode by inserting two **FCN4**s before them.
- While latched into extended ASCII mode, it will apply the same rules if standard ASCII characters are encountered.

Thus, the preferred way to encode extended ASCII characters is to simply embed them in the DATA and let the printer manage the encoding task. For best results, the code set should also not be specified (i.e., **p4** = 1). **FCN4**s should be manually inserted only in systems where extended ASCII characters cannot be transmitted to the printer.



It is illegal to mix automatic and manual modes within the data for a single symbol; i.e., an extended ASCII character encountered in the data after an will be considered a syntax error. Likewise, an **FCN4** after an extended ASCII character will also be considered a syntax error.

## B Command - RSS-14 Bar Code

**Description** Use this command to print RSS-14 bar code family bar codes for numeric data. The printer supports a subset of the RSS bar code family set. The subset includes basic RSS-14, RSS Limited, RSS Stacked and RSS Truncated. The printer does not support RSS Extended or two dimensional composite bar codes.

Printer Models: 3842

**Syntax** **B***p*<sub>1</sub>*p*<sub>2</sub>*p*<sub>3</sub>*p*<sub>4</sub>*p*<sub>5</sub>*p*<sub>6</sub>*p*<sub>7</sub>*p*<sub>8</sub>,"DATA"

**Parameters** *p*<sub>1</sub> = Horizontal start position (X) in dots

*p*<sub>2</sub> = Vertical start position (Y) in dots.

*p*<sub>3</sub> = Rotation

Value	Description
0	No rotation
1	90 degrees
2	180 degree
3	270 degree

*p*<sub>4</sub> = RSS-14 Bar Code ~~bar~~code.

Value	Description	Width Multiplier	Min. Height Multiplier
R14	Basic RSS-14	96	33
RL	Limited	50	13
RS	Stacked	96	13
RT	Truncated	74	10

*p*<sub>5</sub> = Narrow bar width in dots.  
The narrowest mode will be this number of dots.  
**Range:** 1-10.

**Sym bol Width** is the value of *p*<sub>5</sub> times the applicable bar code **Width Multiplier** listed in the **table** for the selected RSS-14 bar code type (*p*<sub>4</sub>). This overall symbol width value includes the required symbol "quiet zone".

*p*<sub>6</sub> = Required Value is 2

## B Command - RSS-14 Bar Code

*p*<sub>7</sub> = Bar code height in dots. See **table** above for the Minimum Height Multiplier. The printer will automatically select the larger of of two values: 1) this value and 2) the selected narrow bar width (*p*<sub>5</sub>) times the **Min. Height Multiplier** listed in the **table** for the selected RSS-14 bar code type (*p*<sub>4</sub>).

*p*<sub>8</sub> = Print human readable code  
Values: B=yes or N=no.

"DATA" = Represents a fixed data field of numeric data 0-9 only.  
The printer's data parser will allow the use of leading zeros (0's) or spaces which will be discarded when data is encoded in the bar code.

Value ( <i>p</i> <sub>4</sub> )	Description	Max. Numeric Value
R14	Basic RSS-14	999999999999
RL	Limited	999999999999
RS	Stacked	999999999999
RT	Truncated	199999999999

Data with the **RTC** The "Data" field can be replaced by or combined with the following variables  
Functions

**TT** = Prints the current time at this position in the predefined format. See the **TT** command for format selection. This variable is available only if the printer RTC Time & Date option is installed.

**TD** = Prints the current date at this position in the predefined format. See the **TD** command for format selection. This variable is available only if the printer RTC Time & Date option is installed.


Because the RSS-14 bar code symbols only support numeric data, the time and date data recalled by the **TD** and **TT** commands must not include delimiters, i.e. "/", "-", or ":" or any other delimiters that may be set.

## B Command - RSS-14 Bar Code

Example #1 N

B100,100,0,RL,4,4,40,B,"1234567890"  
B100,300,0,RT,4,4,40,B,"1234567890"  
B100,500,0,RS,4,4,52,B,"1234567890"  
B100,700,0,RL,4,4,40,B,"9876543210"  
P

Will Produce

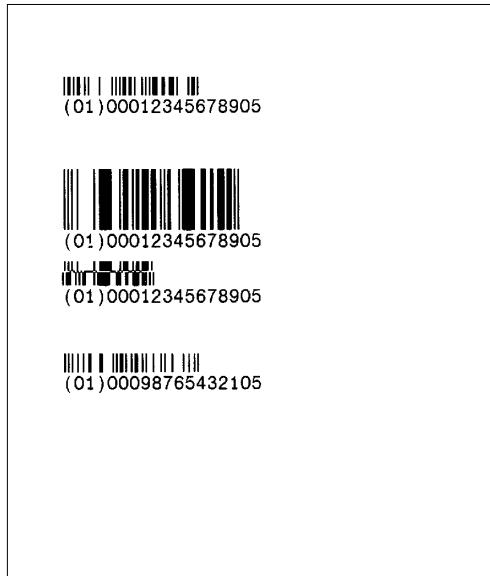


## B Command - RSS-14 Bar Code

Example #2 N

B100,100,0,RL,4,4,40,B,"1234567890"  
B400,300,0,RT,4,4,40,B,"1234567890"  
B500,900,0,RS,4,4,54,B,"1234567890"  
B500,900,1,RS,4,4,54,B,"1234567890"  
B500,900,2,RS,4,4,54,B,"1234567890"  
B500,900,3,RS,4,4,54,B,"1234567890"  
B100,1350,0,RL,4,4,40,B,"9876543210"  
P

Will Produce

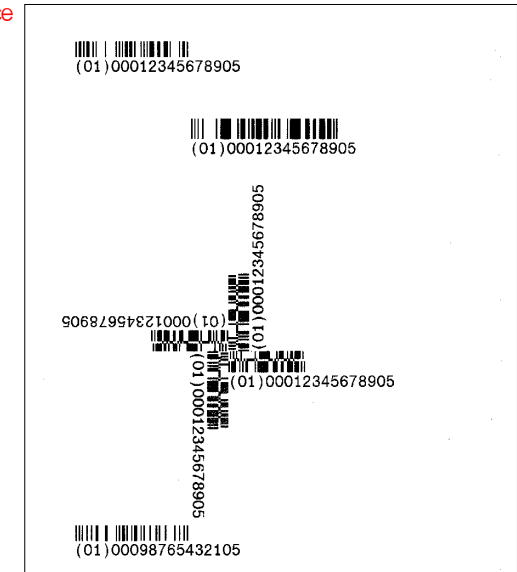

## **b Command - 2D Bar Code - Data Matrix Specific Options**

**Description** Use this command to print Data Matrix two dimensional bar code symbols. The printer will automatically interpret and encode data into Data Matrix bar code symbols, using the ECC 200 data quality format. Individual module size, columns and rows parameters can be specified or the printer can automatically calculate and set one or all of these parameters.

The symbol is made of square modules arranged within a rectangular shape which includes a perimeter scan recognition pattern. The scan recognition pattern produced by the EPL2 printer also includes a "quiet zone" one module wide on all outside edges of the bar code to ensure data integrity.

**Printer Models:** 3842

**Syntax** **bp<sub>1</sub>,p<sub>2</sub>,p<sub>3</sub>[.p<sub>4</sub>][.p<sub>5</sub>][.p<sub>6</sub>][.p<sub>7</sub>], "DATA"**

**Parameters** The printer will automatically generate the Data Matrix bar code using the following parameters.  
**p<sub>1</sub>** = Horizontal start position (X) in dots.

**p<sub>2</sub>** = Vertical start position (Y) in dots.

**p<sub>3</sub>** = **D** - Selects Data Matrix bar codes

Order is not important for parameters **p<sub>4</sub>-p<sub>7</sub>**  
Include the prefix letter (**c**, **r**, **h**, or **v**) to select the parameter followed by a valid numeric value.

**p<sub>4</sub> (c)** = Number of columns to encode  
*See the Symbol Geometries table for valid column values.*

**p<sub>5</sub> (r)** = Number of rows to encode  
*See the Symbol Geometries table for valid row values.*

**p<sub>6</sub> (h)** = Sets the minimum square data module size used for encoding data.  
**Range: 1-40 Default: 5**

**p<sub>7</sub> (v)** = Selects an inverse image of the bar code (sometimes known as reverse video or a negative image).

## **b Command - 2D Bar Code - Data Matrix Specific Options**

**"DATA"** = ASCII data or Binary data bytes

Any combination of data strings, time fields (**TT**), date fields (**TD**), variables and/or counters (the latter two within forms only) that resolve to a valid string of characters.

**Within literal strings** all ASCII characters 0-255 dec. (00-FF hex.) are allowed. Quotes (ASCII 34d) and backslashes (ASCII 92d) must be uniquely handled.

The backslash (\) character designates the following character is a literal and will encode into the data field. Refer to the following examples:

<u>To Print</u>	<u>Enter into data field</u>
"	\"
"Company"	\\"Company\\"
\	\\
\code\	\\code\\
↵	\↵

**Within forms**, further limitations include that a NULL (ASCII 0) character may not appear within bar code DATA and entry limitations do not provide for a way to enter linefeed characters into variables.

The programmer should rely on the symbology's specification to insure format compliance and proper implementation. See the AIM web site for specifications at:

<http://www.aimi.org/>

## b Command - 2D Bar Code - Data Matrix Specific Options

*Data Matrix Symbol Geometries*

Rows	Columns	Numeric Capacity <sup>1</sup>	Alpha-numeric Capacity <sup>2</sup>	Compressed data size <sup>3</sup>
8	18	10	6	5
8	32	20	13	10
10	10	6	3	3
12	12	10	6	5
12	26	32	22	16
12	36	44	31	22
14	14	16	10	8
16	16	24	16	12
16	36	64	46	32
16	48	98	72	49
18	18	36	25	18
20	20	44	31	22
22	22	60	43	30
24	24	72	52	36
26	26	88	64	44
32	32	124	91	62
36	36	172	127	86
40	40	228	169	114
44	44	288	214	144
48	48	348	259	174
52	52	408	304	204
64	64	560	418	280
72	72	736	550	368
80	80	912	682	456
88	88	1152	862	576
96	96	1392	1042	696
104	104	1632	1222	816
120	120	2100	1573	1050
132	132	2608	1954	1304
144	144	3116	2335	1558

1. Paired digits represents the best-case compression. Adjacent digit pairs can be encoded into eight bits.

2. The implied compressibility requires the data be composed of either all lowercase or all uppercase characters with digits and spaces allowed.

3. Any ASCII character (0-127) can be encoded one-to-one, extended ASCII (128-255) requires an additional two-byte overhead.

## b Command - 2D Bar Code - Data Matrix Specific Options

### Automatic Data Matrix Bar Code Generation

The printer automatically tests and changes the Data Matrix bar code geometry to optimize the symbol size per the specified column and row (**p4** - the **c** prefix and **p5** - the **r** prefix) parameters. If no *row* or *column* parameters are specified, the printer will create a minimum size symbol based on the calculated **compressed size** of the *data*. The number of columns and rows in the symbol will be automatically determined with a preference towards the smallest **square** symbol that will accommodate the **compressed size**.

The user may wish to force the number of rows and/or columns to a larger value to achieve uniform symbol sizes.


If the column (**c**) parameter is only specified and it's "18", "26", "32", "36", or "48", or if only *rows* is specified and it is "8", "12", or "16", a rectangular symbol may be produced. For example, if ",r12" is specified (with no *column* parameter), then sizes 12x12, 12x26, and 12x36 are possible selections. The alphanumeric capacity of those symbols is 6, 22, or 31 characters respectively. The smallest symbol size that will accommodate the data will be created. If *rows*, *cols*, and/or *data* length are not compatible with a symbol from the Symbol Geometries table, an error 03 (Data Length Error) will be reported, and no symbol will be produced.

## b Command - 2D Bar Code - Data Matrix Specific Options

**Example:** N↵

b30,20,D,h8,"Zebra Technologies corporation is the leading worldwide manufacturer of bar code labeling solutions and a leading provider of instant-issuance plastic card printers. We distribute our on-demand bar code label printers, plastic card printers, secure ID printing systems, software and related supplies under the Zebra and Eltron brand names to users in more than 90 countries. Our products are used in high-growth automatic identification applications that improve quality and productivity. We count among our customers more than 70 percent of the FORTUNE 500."↵

**Will Produce:**

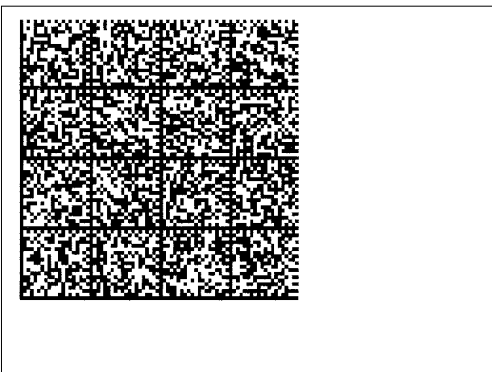

## b Command - 2D Bar Code - MaxiCode Specific Options

**Description** Use this command to generate MaxiCode bar code symbols with a single command. The printer will automatically interpret and encode data into MaxiCode symbols for data modes 2, 3, 4, and 6. Up to eight symbols can be linked.

**Syntax** bp<sub>1</sub>.p<sub>2</sub>.p<sub>3</sub>.p<sub>4</sub>["DATA"]

**Parameters** p<sub>1</sub> = Horizontal start position (X) in dots

p<sub>2</sub> = Vertical start position (Y) in dots

p<sub>3</sub> = **M** - Must be "M" for MaxiCode

p<sub>4</sub> = Mode Selection

Value	Description
Not Used	Automatic Selection Mode 2 or 3
<b>M2</b>	Mode 2
<b>M3</b>	Mode 3
<b>m4</b>	Mode 4
<b>m6</b>	Mode 6

1. If p<sub>4</sub> (**Mx**) is not used, the printer will use the following rules to automatically format the "DATA" parameter. If the postal code (third parameter, PC) in the "DATA" is:

- All numeric characters, the printer will automatically select Mode 2.
- Alpha only or alpha-numeric character combinations will set the printer to Mode 3.
- Not used, the printer automatically selects Mode 3.

2. If p<sub>4</sub> value is "**M2** or **M3**", the printer will use the following rules to format the "Data" parameter:

- **In Mode 2** - If a non-numeric character is entered in the Postal Code "Data" parameter field, then the MaxiCode bar code will not print.
- **In Mode 3** - If the Postal Code "Data" field exceed 6 characters, then the additional characters will be truncated from the bar code field.

## b Command - 2D Bar Code - MaxiCode Specific Options

**p5** = **x,y**

Associated MaxiCode symbol numbering where:

**x** = Symbol Number of

**y** = Total Number of Associated Symbols

**Default:** Not used

**Range:** 1-8 for both **x** or **y**

**"DATA"** = Mode Dependent Data Format

Mode dependent data is bounded by quotation marks. Maximum of 2 KBytes of data.

Mode	Data Format
2 & 3	" <b>cl,co,pc,lpm</b> "
4 & 6	" <b>lpm</b> "

**cl** = **Class Code** (3 digits required)

**co** = **Country Code** (3 digits required)

Mode 2 = Numeric Characters

Mode 3 = International Characters  
(up to 6 characters)

**pc** = Postal Code

Mode 2 = 5 or 9 characters

(All Numeric, including USA  
Postal ZIP 5 or 9 char.)

For less than 9 characters, the  
printer will pad the field with 0's.

Mode 3 (International) = Any  
alphanumeric character  
(up to 6 characters)

**lpm** = **Low priority message** (data)

ASCII printable characters (up to  
84 characters per symbol), any  
256 character map.

The programmer should rely on the symbology's  
specification to insure format compliance and  
proper implementation. See the AIM web site  
for specifications at:

<http://www.aimi.org/>

## b Command - 2D Bar Code - MaxiCode Specific Options

**Example:** N  
b20,20,M,"300,840,93065,1692,This is MaxiCode, but not MaxiCode  
formatted data"  
P1

**Will Produce:**







## b Command - 2D Bar Code - PDF417 Specific Options



The following parameters may be omitted and default values will automatically be inserted. Each parameter value (data string) must be preceded by its associated command prefix character.

**p6 (s)** = sets error correction level  
Error Correction codewords per symbol  
Values: **s1** - **s8**  
If level is not specified, a level will automatically be assigned as per the following table:

EC level	EC Codewords	Auto Select Level
0	2	—
1	4	0-31
2	8	32-63
3	16	64-127
4	32	128-255
5	64	256-511
6	128	512-928
7	256	—
8	512	—

**p7 (c)** = selects data compaction (compression) method  
Values: **0** or **1**, default is **0**

**c0** = Auto-encoding  
The printer will switch between the three compaction modes as needed to create the smallest possible symbol for the given data.

**c1** = Binary mode  
The printer will encode the symbol in byte compaction mode.

PDF417 uses an intermediate data type called a "codeword" to store the characters in the symbol. Each codeword typically consumes a fixed-size portion of the total symbol. More characters inserted into a codeword results in fewer codewords needed to create a symbol. This results in a smaller symbol. To provide efficient data compaction, PDF-417 supports three types of codewords: text, numeric and binary.

## b Command - 2D Bar Code - PDF417 Specific Options

Auto-Encoding (**c0**) data compaction method is set by default, and provides the best compaction. If Binary data compaction (**c1**) is selected the symbol will typically be larger. Binary data compaction may help to minimize the amount of time it takes a system to scan and decode the data encoded within the symbol.

Data Type	Compaction (Byte by Byte)
Text	2 Characters per codeword
Numeric	2.93 Characters per codeword
Binary	1.2 Bytes per codeword

- Text compaction can be used for uppercase, lowercase, numbers, space, carriage return, tab, line feed, and the following characters:

**&, : # . \$ / + % \* = ^ ; @ [ \ \_ ' ~ ! " | 0 { } `**

With text compaction, up to two characters can be encoded in a single codeword.

- Numeric compaction can be used for numbers only. Up to 2.93 characters can be encoded in a single codeword.
- Byte compaction can be used for any character. But the flexibility comes at a price; byte compaction encodes only 1.2 characters per codeword.

**p8 (pxxx,yyy,mm)** = print human readable  
*This parameter is a non-standard implementor of the PDF417 and is only recommended for troubleshooting purposes. Additional variables:*

**p** = "p" - parameter identifier  
**xxx** = horizontal start location  
**yyy** = vertical start location  
**mm** = maximum characters per line

## b Command - 2D Bar Code - PDF417 Specific Options

- p<sub>9</sub> (f)** = Bar code origin point  
Values: **0** or **1**, Default is **1**  
**f1** - Center of bar code as defined by the automatically adjusted symbol size, i.e. width and height. Parameters **p<sub>4</sub>** and **p<sub>5</sub>** values are maximum values only.  
**f0** - Upper left corner of bar code.
- p<sub>10</sub> (x)** - module width (in dots)  
Values: **2 - 9** (i.e. x2-x9)  
Default: Auto selects **6** (dots). Tests data with maximum size limit set by **p<sub>4</sub>** and **p<sub>5</sub>** and then the other optional parameters. The printer automatically reduces the module width in one dot increments until the data fits within the symbols maximum dimensions (and other applied parameters) or until **3** dots has failed, then reports an error.
- p<sub>11</sub> (y)** - set bar height (in dots)  
Range: **4 - 99** (i.e. y4-y99)  
Default: 4 times module width (**p<sub>10</sub>**)
- p<sub>12</sub> (r)** - maximum row count  
Maximum limit for the number of rows to be used for auto selecting symbol features.
- p<sub>13</sub> (l)** - maximum column count  
Maximum limit for the number of columns to be used for auto selecting symbol features.
- p<sub>14</sub> (t)** - truncated flag - legal values are:  
**0** = not truncated, **1** = truncated  
See the PDF 417 specification for details.
- p<sub>15</sub> (o)** - rotation  
Values: **0** = 0°, **1** = 90°, **2** = 180°, **3** = 270°  
Settings of 90° & 270° will cause the symbols maximum height (**p<sub>4</sub>**) and width (**p<sub>5</sub>**) values to transpose when automatically calculating and generating the symbol, i.e. the height would affect column dimensions and width would affect row dimensions.

## b Command - 2D Bar Code - PDF417 Specific Options

**"DATA"** = ASCII data or Binary data bytes  
Represents a fixed data field.

The backslash (\) character designates the following character is a literal and will encode into the data field. Refer to the following examples:

To Print	Enter into data field
"Company"	\ "Company\"
\	\\
\code\	\\code\\
↵	↵

**PDF417: General Information** A PDF417 symbol is organized into minimum of 3 to a maximum of 90 rows and a minimum of 5 to a maximum of 34 columns of codewords.

Each codeword is 17 modules wide. There are 4 bars and 4 spaces per codeword.

Multiply the module width (in dots, **p<sub>10</sub>**) by 17 to get the codeword width.

Multiply the module height (in dots, **p<sub>11</sub>**) by the number of rows to get the symbol height.

Four of the codewords in each row are start, stop and two row indicators. The remaining codewords are referred to as the data region and contain symbol overhead and compacted data.

There can be no more than 928 codewords in the data region. **All combinations of rows and columns are not legal**; 90 rows times 30 columns would produce a data region of 2700 codewords which exceeds the 928 codeword maximum per symbol. See the following table (on the next page) that shows the maximum number of rows and the resulting number of codewords in the data region for each column count.

## **b Command - 2D Bar Code - PDF417 Specific Options**

### **PDF417 Symbol Geometry**

Columns	Maximum Rows	Codewords
5	90	90
6	90	180
7	90	270
8	90	360
9	90	450
10	90	540
11	90	630
12	90	720
13	90	810
14	90	900
15	84	924
16	77	924
17	71	923
18	66	924
19	61	915
20	58	928
21	54	918
22	51	918
23	48	912
24	46	920
25	44	924
26	42	924
27	40	920
28	38	912
29	37	925
30	35	910
31	34	918
32	33	924
33	32	928
34	30	900

## **b Command - 2D Bar Code - PDF417 Specific Options**

**Automatic PDF 417 Bar Code Generation** The printer automatically tests and changes the PDF 417 bar code geometry to maximize the readability of the bar code for a given maximum height and width, specified by **p4** and **p5**.

The printer tests the PDF 417 parameters in this order for a given data string (error correction and compression included):

1. Module width **p10** (for codeword width)
2. Symbol width **p4**
3. Symbol column maximum **p13**
4. Module height **p11**
5. Symbol height **p5**
6. Symbol row maximum **p12**

The printer will start with the maximum value (default or explicit) for these parameters. The printer reduces these values to get the module width and height to maximize readability.

## b Command - 2D Bar Code - PDF417 Specific Options

**Example:** N  
b80,100,P,700,600,x2,y7,l100,r100,f0,s5,"  
Fourscore and seven years ago our fathers brought forth on this conti-  
nent a new nation, conceived in liberty and dedicated to the proposi-  
tion that all men are created equal. Now we are engaged in a great  
civil war, testing whether that nation or any nation so conceived and  
so dedicated can long endure."  
b80,200,P,400,300,p40,440,20,f1,x3,y10,r60,l5,"ABCDEFGHJK12345  
67890abcdefghijklmnopqrstuvwxyz"  
P

Will Produce:



The second symbol has been set to print human readable data with the **p8** parameter (p40,440,20) and is not part of the PDF417 symbol.

## C Command - Counter

**Description** The counter (**C**) command defines one of 10 automatic counters used in consecutive numbering applications (i.e. serial numbers). Counters must be defined **after** variables.



For Numeric Serialization Only. The counter function does not support Alpha or Alpha-Numeric Serialization.

**Syntax** **Cp<sub>1</sub>, p<sub>2</sub>, p<sub>3</sub>, p<sub>4</sub>, "[-]PROMPT"**

**Parameters** **p<sub>1</sub>** = Counter number. Range: **0** to **9**

**p<sub>2</sub>** = Maximum number of digits for counter. Range: **1** to **29**

**p<sub>3</sub>** = Field Justification.  
**L** = Left **R** = Right  
**C** = Center **N** = No Justification

**p<sub>4</sub>** = Step Value. **+** or **-** sign followed by a single digit of **1 - 9**. Using a step value of **+0** allows the counter to be used as an additional variable data field.

**"PROMPT"** = An ASCII text field that will be transmitted to the KDU or host (via the serial interface) each time the command is executed. Typically used to request the operator to enter a starting counter value.

**KDU Prompt Options** **[-]** = Having the first character of the prompt a single minus sign will cause the prompt to display only once after form retrieval.

## C Command - Counter

The **C** command is used in forms that require sequential numbering. When initializing counters, they must be defined in order (e.g. C0 first, C1 second...).

Field justification (**p<sub>3</sub>**) affects the printing of counter data. When **L**, **R** or **C** are selected, the counter field is the width of **p<sub>2</sub>** value. Data will justify within the counter (**p<sub>2</sub>**) field per the selected **p<sub>3</sub>**. The **N** parameter will print the minimum number of characters.

To print the contents of the counter, the counter number is referenced in the “**DATA**” field of the **A** (ASCII text) or **B** (Bar Code) commands.



If the starting value of a counter is “**1**”, then no leading zero padding will be added. If the starting value is “**01**”, then the counter will be padded, up to the maximum number of digits (**p<sub>2</sub>**), with zeros.

**Example:** C0,10,L,+1,“-Enter Serial Number:”

### **Saving and Protecting Consecutive Numbers in Nonvolatile Memory**

This feature is useful when the counter field represents a serial number (or others types of numbers) that should never be repeated. This feature allows for automatic retrieval and increment (or decrement) of the previous counter value used every time a form is retrieved (and printed).

By placing one minus sign as the first character of the prompt, the prompt will appear only once after the form is retrieved, thereby protecting the integrity of the data.

### **Single Digit Summation with Counters**

Add or subtract a single digit from the recalled counter value in a form. If form recalled counter **C0** had a value of **3**, then processing **C0+1** would yield a value of **4** and **C0-2** would yield a value of **1**.

## C Command - Cut Immediate

**Description:** This command allows the printer to initiate an immediate media cut without a form print operation. The printer must have the cutter option installed.

- ☐ The **C** command – Cut Immediate **can not** be used inside of a form.
- ☐ The initial character **C** in a command string is used for both the Cut Immediate (**C**) and Counter Command function (**Cp<sub>1</sub>**) which can only be used within a form. The Cut Immediate Command (**C**) can not be used in a form.
- ☐ The **C** command – Cut Immediate can not be used with the KDU.

*Mobile printers, such as the TR 220, ignore this command.*

**Syntax:** **C**

**Parameters:** None

**Example:** C



Only cut label liner (backing) or tag stock. Label adhesive will built up on the cutter blade and cause the cutter to operate poorly or jam if the labels are cut along with the label liner.



Use the **C** command - Cut Immediate 5 times without media loaded, to perform a self cleaning of the cutter blade.

## D Command - Density

**Description** Use this command to select the print density.

**Syntax** **Dp<sub>1</sub>**

**Parameters** **p<sub>1</sub>** = Density setting. Acceptable values are:

Model	Acceptable Values <sup>1</sup>	Default Value
2722	0 - 15	7
2742	0 - 15	7
3742	0 - 15	7
2443 (Orion)	0 - 15	10
2824	0 - 15	7
2844	0 - 15	10
3842	0 - 15	7
Ht-146	0 - 15	7
2746 / 2746e	0 - 15	7
2684 (Strata)	0 - 15	7

Note 1: 0 is the lightest print and 15 is the darkest.

The density command controls the amount of heat produced by the print head. More heat will produce a darker image. Too much heat can cause the printed image to distort.



The density and speed commands can dramatically affect print quality. Changes in the speed setting typically require a change to the print density.

**Example** **D5**↵ : selects density 5

## dump Command - Enable Dump Mode

**Description** This command allows the advanced programmer to force a user diagnostic “data dump” mode. Sending the dump command to the printer allows the programmer to compare actual data sent to printer with the host program.

Send data to the printer after the dump command has been issued to evaluate program and printer control data. The printer will process all data bytes into ASCII character data, range 0-255 decimal (00-FF hexadecimal).

Press the printer’s Feed button until “Out of Dump” is printed or power cycle the printer to terminate the dump mode.

**Syntax** **dump**

**Parameters** None

- ❑ Set the image buffer width with the **q** command to match the media width prior to issuing the **dump** command.
- ❑ Use the “Dump Mode” character map in Appendix A to interpret the dump mode data (characters printed on the labels) back into ASCII data.
- ❑ Press the Feed button to view dump data that exceeds a single label’s print area. Repeat to view more dump data as required.
- ❑ Pressing the Feed button after the dump data is finished printing will cause the printer to exit the dump mode.
- ❑ Graphics data dump may be large and require multiple labels to print.

**Example** **dump**↵

## eR Command - User Defined Error/Status Character

**Description** This command allows the advanced programmer to specify the printer's error/status report character for error reporting via the RS-232 serial interface.

*Mobile printers, such as the TR 220, ignore this command.*

**Syntax** eRp<sub>1</sub>.p<sub>2</sub>

**Parameters** p<sub>1</sub> = Any single ASCII character  
Range: 0-255 decimal (00-FF hexadecimal)

p<sub>2</sub> = Error/Status Response Mode

p <sub>2</sub>	Mode Descriptions
0	<b>Standard (default):</b> <b>XON</b> (17 dec. / 11 hex.) on Recovery <b>XOFF</b> (19 dec. / 13 hex.) on Error
1	<b>Character Only:</b> Reports the selected error/status character followed by a Carriage Return and Line Feed.
2	<b>Character &amp; Error/Status Code:</b> Reports the selected error/status character, error/status code (see page 3-126 for codes), and then by a Carriage Return and Line Feed.

**Example** For Mode 2 Error and Status Reporting:

eR\$,2 : Sets Error Character to "\$" and  
          : Sets Error Mode to "2".

          : User operates and prints with printer.  
          : User opens print head.

\$11 : Reports Print Head Open

          : User closes print head

\$00 : Reports No Error  
      : Printer Ready for next command.  
      : (Status report for Print Head Closed)

## EI Command - Print Soft Font Information

**Description** This command will cause the printer to print a list of all soft fonts that are stored in memory.

**Syntax** EI



Soft fonts can be downloaded to and deleted from the printer from the Soft Font Downloader Utility, CAL Tools or CAL3 software.

**Example** EI :prints soft font list

**Will Produce**

```
Ext. font information:
a:096char,022dots,0dir.
Ext font memory left: 050K
```

## EK Command - Delete Soft Font

**Description** This command is used to delete soft fonts from memory.



Soft fonts can be downloaded to and deleted from the printer from the Soft Font Downloader Utility, CAL Tools or CAL3.

**Syntax** EK {"FONTNAME"|"\*"}

**Parameters** "FONTNAME" = By entering the name of a font, that font will be deleted from memory.

"\*" = By including an "\*" (wild card), ALL fonts will be deleted from memory.

**Example** EK"A" ↵ :deletes font "A"  
EK"\*" ↵ :deletes all fonts

## ES Command - Store Soft Font

**Description** This command is used to download and store soft fonts in memory.



Soft fonts can be downloaded to and deleted from the printer from the Soft Font Downloader Utility, CAL Tools or CAL3.

**Syntax** ES"FONTNAME"p<sub>1</sub>p<sub>2</sub>p<sub>3</sub>a<sub>1</sub>b<sub>1</sub>c<sub>1</sub>"DATA<sub>1</sub>"a<sub>2</sub>b<sub>2</sub>c<sub>2</sub>"DATA<sub>2</sub>" ... a<sub>n</sub>b<sub>n</sub>c<sub>n</sub>"DATA<sub>n</sub>"

**Parameters** "FONTNAME" = One letter font name  
Range: a-z, Lower Case

- Lower Case named fonts minimize soft font memory usage to only store fonts downloaded and have 256 character limit.

**The following use hexadecimal coding for parameter values.**

**P<sub>1</sub>:** Number of characters to be downloaded  
Range: 00 - FF hex. (0-255 decimal)  
for 1 to 256 fonts per soft font set.

**P<sub>2</sub>:** Character Rotation  
• 00 hex. = 0 and 180 degrees  
• 01 hex. = 90 and 270 degrees (clockwise)  
• 02 hex. = Both 0 and 180 degree rotation pair and the 90 and 270 degree rotation pair

**P<sub>3</sub>:** Font Height  
Range: 00 to FF hex.  
Measured in dots and expressed as a hexadecimal number, i.e. 1B hex. = 27 dots  
Font height includes accentors and dis-senters of characters and need to fit in the character cell  
• 203 dpi printers =  
256 dots = 1.26 inches = 32.03 mm  
• 300 dpi printers = 00 to FF hex.  
256 dots = 0.85 inches = 21.67 mm



## ES Command - Store Soft Font

**a<sub>1</sub>**: (1<sup>st</sup>) Download Character (map position)  
Range: 00 to FF hex.

**b<sub>1</sub>**: (1<sup>st</sup>) Spacing To Next Print Character  
Downloaded character's next printed character position in dots, i.e. Character tracking - the space between characters. Must be greater than or equal to the character width, see parameter **c<sub>1</sub>**. Dots in a decimal number converted to a hexadecimal number.  
Range: 00 to FF hex.

**c<sub>1</sub>**: (1<sup>st</sup>) Downloaded Character's Width  
Dots in a decimal number converted to a hexadecimal number.  
Range: 00 to FF hex.

**"DATA<sub>1</sub>"**: (1<sup>st</sup>) Character Bitmap  
**p<sub>3</sub>** × **c<sub>1</sub>** = bit map data (in bytes)  
Data is received in bytes, on a line by line basis. The font character's 0,0 cell map position is in the top left corner of the map as viewed in the 0 degree rotation. See the examples on the following pages.

**a<sub>2</sub>**: (2<sup>nd</sup>) Download Character (map position)

**b<sub>2</sub>**: (2<sup>nd</sup>) Spacing To Next Print Character

**c<sub>2</sub>**: (2<sup>nd</sup>) Downloaded Character's Width

**"DATA<sub>2</sub>"**: (2<sup>nd</sup>) Character Bitmap  
**p<sub>3</sub>** × **c<sub>2</sub>** bytes = bit map data

**Repeat for each character until the last character in the set is downloaded.**

**a<sub>n</sub>**: (Last) Download Character (map position)

**b<sub>n</sub>**: (Last) Spacing To Next Print Character

**c<sub>n</sub>**: (Last) Downloaded Character's Width

**"DATA<sub>n</sub>"**: Character Bitmap  
**p<sub>3</sub>** × **c<sub>n</sub>** bytes = bit map data

## ES Command - Store Soft Font

**For fonts with the rotation parameter set for "both" (p<sub>2</sub> = 02 hex.):**

Repeat the individual font character download for each 90° rotated character from the start of the character set until the last rotated character in the set is downloaded.

**a<sub>1-90°</sub>** **b<sub>1-90°</sub>** **c<sub>1-90°</sub>** **"DATA<sub>1-90°</sub>"**  
**a<sub>2-90°</sub>** **b<sub>2-90°</sub>** **c<sub>2-90°</sub>** **"DATA<sub>2-90°</sub>"**  
**a<sub>3-90°</sub>** **b<sub>3-90°</sub>** **c<sub>3-90°</sub>** **"DATA<sub>3-90°</sub>"**


**a<sub>n-90°</sub>**: (Last) Download Character

**b<sub>n-90°</sub>**: (Last) Spacing To Next Print Character

**c<sub>n-90°</sub>**: (Last) Downloaded Character's Width

**"DATA<sub>n-90°</sub>"**: Character Bitmap  
**p<sub>3</sub>** × **c<sub>n</sub>** bytes = bit map data  
The number of individual character maps downloaded will be double the characters in the font set (**p<sub>1</sub>**).

*Example of  
Measuring Soft Font  
Size*

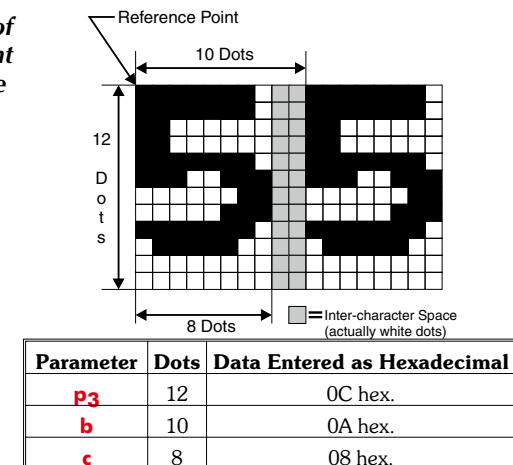

## ES Command - Store Soft Font

**Soft Fonts** The typical soft font download command strings to the printer. The following example **Programming Code** was generated with the CAL3 software.

```

00000000 0D 0A 45 4B 22 61 22 0D 0A 45 53 22 61 22 03 00 ..EK"a"..ES"a"..
          ↑          ↑          ↑      ↑
        CR & LF    CR & LF      P1 P2

00000010 1A 41 17 03 00 7C 00 00 7C 00 00 7C 00 00 EE 00 .A...|...|...
          ↑  ↑  ↑  ↑
        p3 a1 b1 c1

00000020 00 EE 00 01 EF 00 01 C7 00 01 C7 00 03 83 80 03 .....
00000030 83 80 07 83 C0 07 01 C0 07 01 C0 0E 00 E0 0F FF .....
00000040 E0 0F FF E0 1F FF F0 1C 00 70 3C 00 78 38 00 38 .....p<.x8.8
00000050 38 00 38 70 00 1C 70 00 1C F0 00 1E E0 00 0E 00 8.8p..p.....
00000060 00 00 42 17 03 1F FF 00 1F FF C0 1F FF E0 1C 01 ..B.....
          ↑  ↑  ↑
        a2 b2 c2

00000070 E0 1C 00 F0 1C 00 70 1C 00 70 1C 00 70 1C 00 E0 .....p..p..p...
00000080 1C 01 E0 1F FF C0 1F FF C0 1F FF E0 1C 00 F0 1C .....
00000090 00 70 1C 00 38 1C 00 38 1C 00 38 1C 00 38 1C 00 .p..8..8..8..8..
000000A0 38 1C 00 70 1C 00 F0 1F FF E0 1F FF C0 1F FF 00 8..p.....
000000B0 00 00 00 43 19 03 00 7F 00 01 FF C0 03 FF E0 07 ...C.....
          ↑  ↑  ↑
        a3 b3 c3


000000C0 C1 F0 0F 00 78 1E 00 38 1C 00 3C 1C 00 18 3C 00 ...x..8..<...<.
000000D0 00 38 00 00 38 00 00 38 00 00 38 00 00 38 00 00 .8..8..8..8..8..
000000E0 38 00 00 38 00 00 1C 00 0C 1C 00 0E 1C 00 1C 0E 8..8.....
000000F0 00 3C 0F 00 7C 07 C0 F8 03 FF F0 01 FF E0 00 7F .<...|.....
00000100 80 00 00 00 0D 0A
          ↑
        CR & LF

```

## ES Command - Store Soft Font

**Font Bitmap Data Format** The black and white bitmap that represents the font must be converted into ASCII hexadecimal code. The 0° font format has dot converted to data bytes reading from left to right and the last byte in a line is padded with zeros to complete the line and data byte.

Starting Point

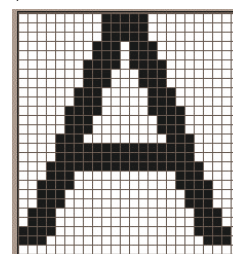


Line 1 - 00000000 01111100 00000000 = 00 7C 00  
 Line 2 - 00000000 01111100 00000000 = 00 7C 00  
 Line 3 - 00000000 01111100 00000000 = 00 7C 00  
 Line 4 - 00000000 11111110 00000000 = 00 FE 00  
 ...  
 ...

0° Data  
 00 7C 00 00 7C 00 00 7C 00 00 FE 00 ...

The 0° and 90° font data is then sent to the printer in line order.

Starting Point

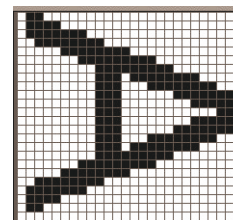

Line 1 - 01 10000000 00000000 00000000 = 01 80 00 00  
 Line 2 - 01 11100000 00000000 00000000 = 01 E0 00 00  
 Line 3 - 01 11111100 00000000 00000000 = 01 FC 00 00  
 Line 4 - 00 11111111 00000000 00000000 = 00 FF 00 00  
 ...  
 ...

90° Data  
 01 80 00 00 01 E0 00 00 01 FC 00 00 00 FF 00 00 ...

## **f** Command - Cut Position

---

**Description** Use this command on an individual printer to provide precision cut placement to:

- Compensate for small sensor to cutter position differences on a printer by printer basis.
- Fine-tune the cut position to compensate for differences in media.

*Mobile printers, such as the TR 220, ignore this command.*

**Syntax** **f****p**<sub>1</sub>

**Parameters** **p**<sub>1</sub> = Cut position index measured in dots. Acceptable values: 070 to 130. The default value is 100.

When using the label liner cutter option, the printer will advance each printed label to the appropriate programmed offset cut position, between labels, before cutting. Due to media differences, the printer may not accurately position the labels before cutting, causing the cutter to cut the label instead of the liner.



The printer's cutter is not designed to cut labels. Labels have adhesive that may interfere with the proper operation of the cutter.

Only cut label liner and tag stock and do not exceed the specified media density and thickness of the cutter.

---

If the cut position causes the label just printed to be cut, increase the cut position index value (>100). If the cut position causes the label following the one just printed to be cut, decrease the cut position index value (<100).

## **FE** Command - End Form Store

---

**Description** This command is used to end a form store sequence.

**Syntax** **FE**

**Example** FS"FORMNAME"↵  
...  
FE↵

The form store sequence is started with the **FS** command.

## FI Command - Print Form Information

**Description** This command will cause the printer to print a list of all forms stored in memory.

**Syntax** **FI**

**Example** FI ↵ :prints forms list

**Will Produce**

```
Form information:
1
TESTFORM
Form memory left:004.9K
```

## FK Command - Delete Form

**Description** This command is used to delete forms from memory.

**Syntax** **FK** [ "**FORMNAME**" | "\*" ]

**Parameters** "**FORMNAME**" = By entering the name of a form, that form will be deleted from memory.

- The name may be up to **8 characters** long.
- Form names stored by the printer are case sensitive and will be stored exactly as entered on the **FS** command line; i.e. "**FORM1**", "**form1**" and "**FoRm1**" are three different forms when stored into the printer or when retrieved by the user.
- Deleting a single form requires the **FK"FORMNAME"** be issued twice for each form to be deleted. Some label generation programs re-issue forms (form delete and store) every time a label is printed which reduces flash memory life.

**"\*"** = By including an "\*" (wild card), ALL forms will be deleted from memory. The **FK"\*"** does not need to be issued twice to delete all forms.

**Example** FK"AFORM" ↵ :deletes form "AFORM"  
FK"AFORM" ↵ :second delete form "AFORM" required  
:for flash printers

FK"\*" ↵ :deletes all forms

## FR Command - Retrieve Form

---

**Description** Use this command to retrieve a form that was previously stored in memory.

**Syntax** **FR"FORMNAME"**

**Parameters** **"FORMNAME"** = This is the form name used when the form was stored.

- The name may be up to **8 characters** long.
- Form names stored by the printer are case sensitive and will be stored exactly as entered on the **FS** command line; i.e. **"FORM1"**, **"form1"** and **"FoRm1"** are three different forms when stored into the printer or when retrieved by the user.

**Example** FR"TEST1" ↵ :retrieves the form named TEST1

To print a list of the forms currently stored in memory, use the **FI** command.

## FS Command - Store Form

---

**Description** This command begins a form store sequence.

**Syntax** **FS"FORMNAME"**

**Parameters** **"FORMNAME"** = This is the form name that will be used when retrieving the stored form.

- The name may be up to **8 characters** long.
- Form names stored by the printer are case sensitive and will be stored exactly as entered on the **FS** command line; i.e. **"FORM1"**, **"form1"** and **"FoRm1"** are three different forms when stored into the printer or when retrieved by the user.
- Global commands such as **EI, EK, ES, FI, FK, GI, GK, GM, M, N, P, TS, U, UE, UF, UG, Y, W, ?, ^@** should not be used in a form store sequence.



Form name, **AUTOFR**, is reserved for automatic, single form recall, see page 3-9 for details.

- ❑ All commands following **FS** will be stored in form memory until the **FE** command is received, ending the form store process.
- ❑ Delete a form prior to updating the form by using the **FK** command. If a form (with the same name) is already stored in memory, issuing the **FS** command will result in an error and the previously stored form is retained.
- ❑ To print a list of the forms currently stored in memory, use the **FI** command.
- ❑ Data stored within a form can not have the Null (0 dec. 00 hex.) character as part of any data within that form.
- ❑ A form will not store if insufficient memory is available. See the **M** command for details on adjusting and configuring memory for forms, graphics and soft fonts.

## FS Command - Store Form

### Example

```
FK"TESTFORM" ↵ :delete form "TESTFORM"
FS"TESTFORM" ↵ :begins the form store sequence of
                  :the form "TESTFORM"
V00,15,N,"Enter Product Name:" ↵
B10,20,0,3,2,10,100,B,"998152.001" ↵
A50,200,0,3,1,1,N,"Example Form" ↵
A50,400,0,3,1,1,N,"Model Name: "V00 ↵

FE ↵ :ends form store sequence
FI ↵ :prints list of stored forms
```

## GG Command - Print Graphics

**Description** Use this command to print a PCX (format) graphic that has been previously stored in printer memory.

**Syntax** **GG***p*<sub>1</sub>,*p*<sub>2</sub>,{"**NAME**" | **Variable Data**}

**Parameters** *p*<sub>1</sub> = Horizontal start position (X) in dots.

*p*<sub>2</sub> = Vertical start position (Y) in dots.

**"NAME" or Variable Data** = This is the graphic name used when the graphic was stored. This name can be supplied via variable data (**V00 - V99**).

- The name may be up to **8 characters** long.
- Graphic names stored by the printer are case sensitive and will be stored exactly as entered with the **GM** command line; i.e. **"GRAPHIC1"**, **"graphic1"** and **"graPHic1"** are three different graphics when stored into the printer or when retrieved by the user.

**Example:** GG50,50,"LOG01" ↵

```
FK"TESTFORM" ↵ :delete form "TESTFORM"
FS"TESTFORM" ↵ :begins the form store sequence of
                  :the form "TESTFORM"
V00,8,N,"Enter Graphic Name:" ↵
GG50,50,V00 ↵
FE ↵ :ends form store sequence

FR"TESTFORM" ↵ :retrieves the form named TESTFORM
? ↵ :Download variables
LOG01 ↵ :Graphic name to be recalled and
          :printed

P1 ↵ :Print one label with graphic LOG01
```

## GI Command - Print Graphics Information

**Description** This command will cause the printer to print a list of all graphics stored in memory.

**Syntax** **GI**

**Example** `GI↵` :prints graphics list

**Will Produce**

```
Graphics information:
LOGO
Graphics memory left:003K
```

## GK Command - Delete Graphics

**Description** Use this command to delete graphics from memory.

**Syntax** **GK {"NAME"|"\*"}**

**Parameters** **"NAME"** = By entering the name of a graphic, that graphic will be deleted from memory.

- Graphic names stored by the printer are case sensitive and will be stored exactly as entered with the **GM** command line; i.e. **"LOGO1"**, **"logo1"** and **"LoGo1"** are three different graphics when stored into the printer or when retrieved by the user.
- Deleting a single graphic requires that the **GK"FORMNAME"** command string be issued twice for each form deleted. Some label generation programs re-issue graphics (graphic delete and store) every time a label is printed which will reduce flash memory life.

**"\*"** = By including an "\*" (wild card), ALL graphics will be deleted from memory. The **GK"\*"** does not need to be issued twice to delete all graphics.

**Example:** `GK"LOGO"↵` :deletes graphic "LOGO"  
`GK"LOGO"↵` :second delete graphic "LOGO" required  
:for flash printers.

`GK"*"↵` :deletes all graphics

## GM Command - Store Graphics

**Description** Use this command to store PCX graphics files in memory.

**Syntax** **GM"NAME"p<sub>1</sub>**↓  
**"DATA"**

**Parameters** **"NAME"** = This is the graphic name that will be used when retrieving the stored graphic.

- The name may be up to **8 characters** long.
- Graphic names stored by the printer are case sensitive and will be stored exactly as entered with the **GM** command line; i.e. **"LOGO1"**, **"logo1"** and **"LoGo1"** are three different graphics when stored into the printer or when retrieved by the user.

**p<sub>1</sub>** = This is the file size in bytes. Use the DOS DIR command to determine the exact file size.

**"DATA"** = Graphic data in 1-bit (black & white) PCX (binary data) format file.

- ❑ A graphic will not store if sufficient memory is not allocated to graphic memory. See the **M** command for details on adjusting and configuring memory to store graphics (forms and soft fonts).
- ❑ Verify the proper storage of the graphic with the **GI** command.

## GM Command - Store Graphics

**Example** GK"LOGO1"↓ :deletes graphic "LOGO1" - Required  
GK"LOGO1"↓ :second delete graphic - Required  
GM"LOGO1"584↓ :Prepares printer to receive graphic  
:"LOGO1"  
DATA : Data string in PCX format

If using a DOS system, the PCX format file (binary data) portion can be sent to the printer using the DOS COPY command. For example, if you have a PCX file named LOGO1.PCX in your current directory, the appropriate command would be:

**COPY LOGO1.PCX PRN /b**

After downloading, the **GI** command can be used to verify that the graphic was successfully stored.

**Example** First, create a text file "STOREIT.TXT" with an ASCII text editor, as follows:

↓  
GK"WORLD"↓  
GK"WORLD"↓  
GM"WORLD"2004↓

Where WORLD is the name of the graphic and 2004 is the size (in bytes) of the PCX file.

DO NOT add extra linefeeds to the STOREIT.TXT file.

Next, at the DOS prompt, type:

**COPY STOREIT.TXT + WORLD.PCX PRN /b**

or use the Zebra Firmware Downloader from Windows OS download the STOREIT.TXT and WORLD.PCX in sequence to the printer.



## GW Command - Direct Graphic Write

**Description** Use this command to load binary graphic data directly into the *Image Buffer* memory for immediate printing. The printer does not store graphic data sent directly to the image buffer.

The graphic data is lost when the image has finished printing, power is removed or the printer is reset. Commands that size (**Q** and **q**) or clear (**N** and **M**) the image buffer will also remove graphic image data.

**Syntax** **GW****p<sub>1</sub>.p<sub>2</sub>.p<sub>3</sub>.p<sub>4</sub>DATA**↵

**Parameters** **p<sub>1</sub>** = Horizontal start position (X) in dots.

**p<sub>2</sub>** = Vertical start position (Y) in dots.

**p<sub>3</sub>** = Width of graphic in bytes.  
Eight (8) dots = One (1) byte of data

**p<sub>4</sub>** = Length of graphic in dots (or print lines).

**DATA** = Raw binary data without graphic file formatting. Data must be in bytes. Multiply the width in bytes (**p<sub>3</sub>**) by the number of print lines (**p<sub>4</sub>**) for the total amount of graphic data. The printer automatically calculates the exact size of the data block based upon this formula.

## I Command - Character Set Selection

**Description** Use this command to select the appropriate character set for printing and display (KDU).

**Syntax** **I****p<sub>1</sub>.p<sub>2</sub>.p<sub>3</sub>**

**Parameters** **p<sub>1</sub>** = Number of data bits - **8** for 8 bit data or **7** for 7 bit data.

**p<sub>2</sub>** = Printer Code page/Language Support

8 Bit Data			7 Bit Data	
<b>p<sub>2</sub></b>	<b>Code Page</b>	<b>Description</b>	<b>p<sub>2</sub></b>	<b>Description</b>
0	DOS 437	English - US	0	USA
1	DOS 850	Latin 1	1	British
2	DOS 852	Latin 2 (Cyrillic II/Slavic)	2	German
3	DOS 860	Portuguese	3	French
4	DOS 863	French Canadian	4	Danish
5	DOS 865	Nordic	5	Italian
6	DOS 857	Turkish	6	Spanish
7	DOS 861	Icelandic	7	Swedish
8	DOS 862	Hebrew	8	Swiss
9	DOS 855	Cyrillic		
10	DOS 866	Cyrillic CIS 1		
11	DOS 737	Greek		
12	DOS 851	Greek 1		
13	DOS 869	Greek 2		
A	Windows 1252	Latin 1		
B	Windows 1250	Latin 2		
C	Windows 1251	Cyrillic		
D	Windows 1253	Greek		
E	Windows 1254	Turkish		
F	Windows 1255	Hebrew		

## I Command - Character Set Selection

**p3** = KDU Country Code (8 bit data only)

KDU Country Code (8 bit only)					
032	Belgium	049	Germany	027	S. Africa
002	Canada	031	Netherl'ds	034	Spain
045	Denmark	039	Italy	046	Sweden
358	Finland	003	Latin Am.	041	Swizerl'd
033	France	047	Norway	044	U.K.
		351	Portugal	001	U.S.A.

The default setting is **18,0,001**. See Appendix A for EPL2 standard font character maps.

## JB Command - Disable Top Of Form Backup

**Description** This command disables the Top Of Form Backup feature when printing multiple labels. At power up, Top Of Form Backup will be enabled.

**Syntax** **JB**

**Example:** JB↵



With the **JB** command enabled, the first label will backup to the Top Of Form before printing. This preserves the first label which has stopped approximately one-half inch from the print head. This is the label's tear away point as set by the previous print operation.

## JC Command - Disable Top Of Form Backup- All Cases

---

**Description** This command disables the Top Of Form Backup feature for all operations. Use this command for liner-less printing and special media cutting modes.



This command only is available in the 2824, 2844, and 3842 desktop printer models at this time.

---

**Syntax** **JC**

**Example:** JC↵

## JF Command - Enable Top Of Form Backup

---

**Description** This command enables the Top Of Form Backup feature and presents the last label of a batch print operation. Upon request initiating the printing of the next form (or batch), the last label backs up the Top Of Form before printing the next label.

**Syntax** **JF**

**Example:** JF↵

## LE Command - Line Draw Exclusive OR

**Description** Use this command to draw lines with an “Exclusive OR” function. Any area, line, image or field that this line intersects or overlays will have the image reversed or inverted (sometimes known as reverse video or a negative image). In other words, all black will be reversed to white and all white will be reversed to black within the line’s area (width and length).

**Syntax** **LE***p1, p2, p3, p4*

**Parameters** **p1** = Horizontal start position (X) in dots.


**p2** = Vertical start position (Y) in dots.

**p3** = Horizontal length in dots.

**p4** = Vertical length in dots.

**Example:** N↵ :clear image buffer  
LE50,200,400,20↵ :draw a line  
LE200,50,20,400↵ :draw another line  
P1↵ :print one label

**Will Produce:**

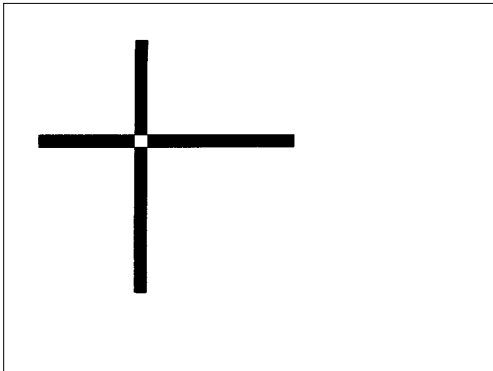

## LO Command - Line Draw Black

**Description** Use this command to draw black lines, overwriting previous information.

**Syntax** **LO***p1, p2, p3, p4*

**Parameters** **p1** = Horizontal start position (X) in dots.


**p2** = Vertical start position (Y) in dots.

**p3** = Horizontal length in dots.

**p4** = Vertical length in dots.

**Example:** N↵ :clear image buffer  
LO50,200,400,20↵ :draw a line  
LO200,50,20,400↵ :draw another line  
P1↵ :print one label

**Will Produce:**

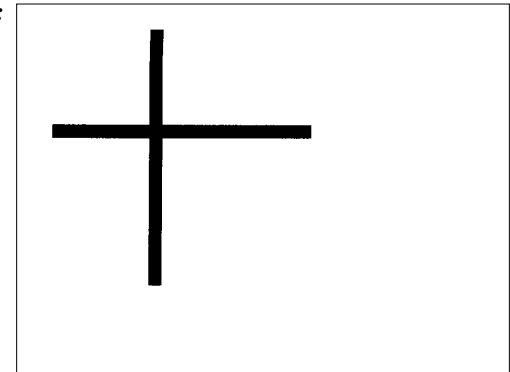

## LS Command - Line Draw Diagonal

**Description** Use this command to draw diagonal black lines, overwriting previous information.

**Syntax** **LS****p<sub>1</sub>.p<sub>2</sub>.p<sub>3</sub>.p<sub>4</sub>.p<sub>5</sub>**

**Parameters** **p<sub>1</sub>** = Horizontal start position (X) in dots.

**p<sub>2</sub>** = Vertical start position (Y) in dots.


**p<sub>3</sub>** = Line thickness in dots.

**p<sub>4</sub>** = Horizontal end position (X) in dots.

**p<sub>5</sub>** = Vertical end position (Y) in dots.

**Example:** N↵ :clear image buffer  
LS10,10,20,200,200↵ :draw a diagonal line  
P1↵ :print one label

**Will Produce:**

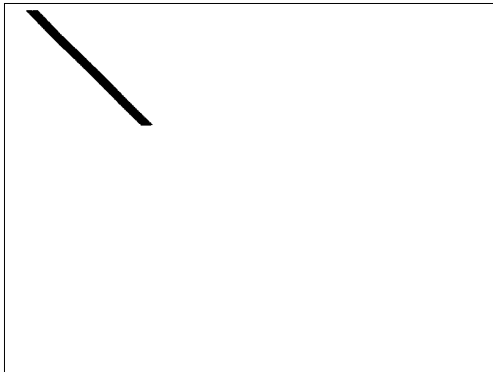

## LW Command - Line Draw White

**Description** Use this command to draw white lines, effectively erasing previous information.

**Syntax** **LW****p<sub>1</sub>.p<sub>2</sub>.p<sub>3</sub>.p<sub>4</sub>**

**Parameters** **p<sub>1</sub>** = Horizontal start position (X) in dots.


**p<sub>2</sub>** = Vertical start position (Y) in dots.

**p<sub>3</sub>** = Horizontal length in dots.

**p<sub>4</sub>** = Vertical length in dots.

**Example:** N↵ :clear image buffer  
LO50,100,400,20↵ :draw black line  
LO50,200,400,20↵ :draw another black line  
LO50,300,400,20↵ :draw another black line  
LW200,50,20,400↵ :draw a white line over all 3 black lines  
P1↵ :print 1 label

**Will Produce:**

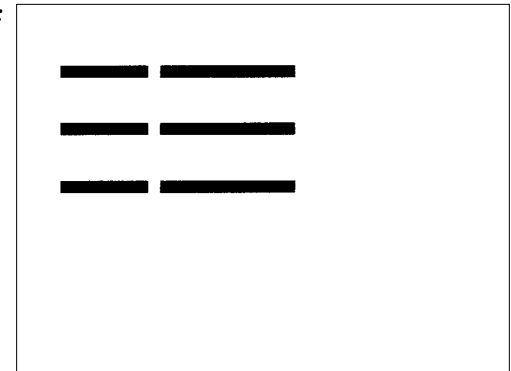

## M Command - Memory Allocation

---

**Description** Use this command to set the size of form memory. The remainder of the form storage memory will be shared by soft fonts and graphics data.

For legacy printers, this command was originally used for memory configuration (partition) of forms, image buffer, graphics and soft fonts memory which was shared in legacy SRAM and early model flash printers.

**Syntax** **M***p1.p2.p3*

**Parameters** **p1** = Parameter ignored, but required to process. Represents Image buffer size in whole KBytes.

**p2** = Form(s) memory size in whole KBytes. The parameter, **p2** (form memory size), inversely effects the size of the shared graphics/soft fonts memory.

**p3** = Parameter ignored, but required to process. Graphics (and soft font) memory size in whole Kbytes.

If the **M** command is issued, then all three parameters must be present.



Available memory and the current allocation of memory can be displayed with the **U** command or an AutoSense procedure, see the printer user's manual for details.

---

## N Command - Clear Image Buffer

---

**Description** This command clears the image buffer prior to building a new label image.

**Syntax** **N**

- Considerations**
- ☐ Do not use the **N** command within stored forms.
  - ☐ All printer configuration commands should be issued prior to issuing the **N** command to begin building the image for printing within the image buffer.
  - ☐ Always send a Line Feed (**LF**) prior to the **N** command to ensure that previous data in the command buffer has cleared and the printer is initialized and ready to accept commands.

**Example:** **N**↵ :activates command processing  
↵ :clears the image buffer

## o Command - Cancel Software Options

---

**Description** This command allows the user to cancel most printer customization parameters set by o series commands.

Parameters set by the following commands are canceled and returned to default operation:

- oH
- oM
- oE

**Syntax** o

**Parameters** None

The o command is a global printer command.

☐ It can not be issued inside of a form.

☐ It must be issued prior to issuing a text or bar code command (and printing).

## oB Command - Cancel Auto Bar Code Optimization

---

**Description:** This command allows the advanced programmer to disable bar code optimization for rotated (90° & 270°) bar codes.

**Syntax:** oB

**Parameters:** None

The oB command is a global printer command.

☐ It can not be issued inside of a form.

☐ It must be issued prior to issuing a bar code command (and printing).

To reapply bar code defaults, issue a o (small letter “o”) command. See page C-74 for important details on the effects of using the o command.

Reset the printer with a ^@ command with flash firmware printers or cycle printer power to clear the oB command and return the printer to normal operation.



Zebra Technologies Corporation does not warrant, support, or endorse the use of bar codes generated by the printer after a oB command has been issued.

Zebra Technologies Corporation does not support this feature other than with the information supplied in this document.

---

## oE Command - Line Mode Font Substitution

**Description:** This command is a Page Mode (EPL2) command that allows the printer to set alternate **Line Mode** font character sets. The fonts are activated by the **oE** command and are intended for EPL1 emulation.

*Mobile printers, such as the TR 220, ignore this command.*

**Syntax:** **oEp<sub>1</sub>.p<sub>2</sub>.p<sub>3</sub>.p<sub>4</sub>.p<sub>5</sub>**

**p<sub>1</sub>** = 5 x 7 bitmap font - Normal (CCSET4)  
Line Mode EPL1 Compatibility Font A0  
Total character area is 8 x 11 dots

**p<sub>2</sub>** = 5 x 7 bitmap font - Bold (CCSET4)  
Line Mode EPL1 Compatibility Font A0  
Total character area is 8 x 11 dots

**p<sub>3</sub>** = 5 x 7 bitmap font - Doubled (CCSET4)  
Line Mode EPL1 Compatibility Font A0  
Total character size is 8 x 11 dots

**p<sub>4</sub>** = 14 x 22 bitmap font - (CCSET1)  
Line Mode EPL1 Compatibility Font A  
Total character area is 16 x 26 dots

**p<sub>5</sub>** = 10 x 18 bitmap font - (CCSET3)  
Line Mode EPL1 Compatibility Font A  
Total character area is 12 x 22 dots

- ☐ Parameters **p<sub>1</sub>-p<sub>5</sub>** are preloaded soft fonts.
- ☐ Parameters **p<sub>1</sub>-p<sub>5</sub>** must be all belower case alpha soft fonts. See the **ES** command on page 3-45 for more details on soft fonts.
- ☐ The EPL2 font sets 2 & 4 can be restored as the default Line Mode fonts by sending the **o** command without a parameter.

## oH Command - Macro PDF Offset

**Description** Use this command to place addition secondary, associated Macro PDF symbols for the continuation of data greater than a single PDF 417 bar code can store.



This command must precede any PDF 417 bar code commands in order to print Macro PDF (multiple bar code) symbols from a single **b** command's data field.

**Syntax** **oHp<sub>1</sub>.p<sub>2</sub>**

**Parameters** **p<sub>1</sub>** = Horizontal offset position (X) in dots of the next Macro PDF bar code symbol.

**p<sub>2</sub>** = Vertical offset position (Y) in dots of the next Macro PDF bar code symbol.


**See the following page for an example.**



## oH Command - Macro PDF Offset

**Example:** N␣  
q784␣  
Q1215,24␣  
R0,0␣  
oH0,500␣  
␣  
N␣  
b80,100,P,700,600,x2,y7,l100,r100,f0,s5,"\  
Fourscore and seven years ago our fathers...  
<< the rest of Lincoln's Gettysburg Address HERE >>  
... and that government of the people, by the people, for the people  
shall not perish from the earth.  
"␣  
P␣

**Will Produce:**

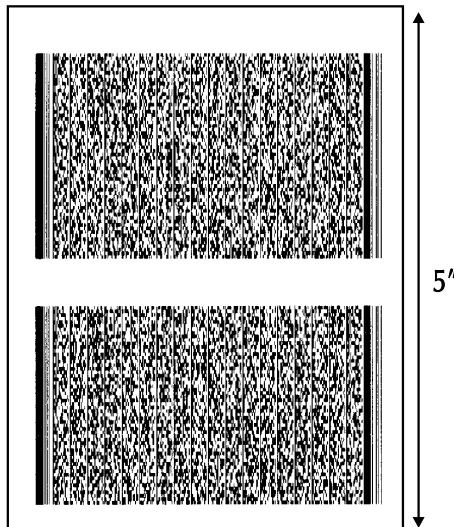

## oM Command - Disable Initial Esc Sequence Feed

**Description** This command disables the automatic label calibration routine executed by the printer upon receiving the first escape command sequence from the Windows printer driver. The printer normally measures a single label and sets the top of form prior to printing the first label after a power-up reset. The Windows™ printer driver issues escape sequences when printing.

This command's primary use is to save preprinted forms such as serialized labels, tags or tickets.

*Mobile printers, such as the TR 220, ignore this command.*

### Syntax oM

This command must be issued prior to printing with the Windows driver's or any other Escape (esc) mode printing operation.

To reinitialize label calibration, issue a o (111 dec. or 6F hex.) command.

## oR Command - Character Substitution (Euro)

**Description** This command allows the advanced programmer to substitute the Euro currency character for any ASCII character in printer resident font numbers 1-4.

The second function this command supports is the zero character style toggling between a plain zero character and a zero with a slash.

Character substitution settings are stored in the printer's non-volatile 'flash' memory. The original character can be restored by sending the **oR** command without a parameter.

**Syntax** **oR** [**p**<sub>1</sub>,**p**<sub>2</sub>]

Parameters:  $\mathbf{p}_1 = \mathbf{E}$

If the **p2** parameter is not provided, then the Euro character will map to code page position 213 decimal (D5 hexadecimal) for all code pages.

$\mathbf{p}_1 = \mathbf{0}$  (zero)

Toggles the zero character:  
slash — no slash (out of box default)

**p<sub>2</sub>** = Decimal number

**Range:** 0 to 255

The active code page's ASCII character map position to be replaced by the Euro character. The Euro character will be active in this map position for all code pages. See the `I` command for details on code page selection.

**None** = No Parameters (**p<sub>1</sub>/p<sub>2</sub>**) resets to all code pages to original default character mapping.

Optionally, to reapply normal character operations, issue a **◻** (111 dec. or 6F hex.) command. See page 3-74 for important details on the effects of using the **◻** command.



The Euro character is not supported in Font 5 character set.

### oR Command - Character Substitution (Euro)

The **oR** command is a global printer command.

- ❑ It can not be issued inside of a form.
- ❑ It must be issued prior to issuing a text command (and printing).
- ❑ Effects a single character on a single code page. Changing the character position will restore the original character.
- ❑ Flash memory printer parameter data is preserved until it is changed by the **oR** command or reprogramming of the printer.

**Example:** oRE ↵

- : Places the Euro character into character
- : map position 213 decimal
- : (D5 hexadecimal)

oRE,128↓

- : Places the Euro into character map
- : position 128 decimal (80 hexadecimal)

oR ↙

- : Clears Character Substitution,
- : Restores default character maps

## oW Command - Customize Bar Code Parameters

**Description:** This command allows the advanced programmer to modify specific bar code parameters to exceed the specified bar code's design tolerances, i.e. reduce the bar code size.



Using the **oW** command may cause bar codes to become unreadable by some or all bar code scanners.

**Syntax:** **oW**p<sub>1</sub>.p<sub>2</sub>.p<sub>3</sub>.p<sub>4</sub>.p<sub>5</sub>

**Parameters:** p<sub>1</sub> = Initial width narrow white bar.  
Default value is 2

p<sub>2</sub> = Initial width narrow black bar.  
Default value is 2

p<sub>3</sub> = Initial width wide white bar.  
Default value is 4

p<sub>4</sub> = Initial width wide black bar.  
Default value is 4

p<sub>5</sub> = Initial bar code gap.  
Default value is 3

The **oW** command is a global printer command.

- ☐ They can not be issued inside of a form.
- ☐ They must be issued prior to issuing a bar code command (and printing).
- ☐ Use only one bar code format. Using more than one bar code may cause unpredictable results or operation.
- ☐ Issue all 5 command parameters (p1-5 ). Use the default parameter values as place holders.
- ☐ Bar code printed with this command should be printed in the picket fence orientation (0° & 180° rotations) to maximize scanning.

## oW Command - Customize Bar Code Parameters

Reset the printer with a ^@ or o commands with flash firmware printers or cycle printer power to clear the **oW** command and return the printer to normal operation. See page C-74 for important details on the effects of using the o command.

The **B** command parameters p<sub>5</sub> & p<sub>6</sub> must be set to 0 to use bar codes customized with this command.



The **oW** command has been tested for parameter functionality for Bar Code 39 only. The **oW** command may also function with Codabar and Interleaved 2 of 5 bar code, but they have not been functionally verified for this command.



Zebra Technologies Corporation does not warrant, support, or endorse the use of bar codes generated by the printer after a **oW** command has been issued.

Zebra Technologies Corporation does not support this feature other than with the information supplied in this document.

## ○ Command - Hardware Options

**Description** Use this command to select various printer options. Options available vary by printer configuration.

Options selected and enabled in a printer can be verified by checking the printer configuration printout, Dump Mode printer status label. See the **U** command and the *Explanation of the Status Printout* on page 2-2.

Mobile printers, such as the TR 220, ignore this command.

**Syntax** **O**[**C**[**p**<sub>1</sub>], **D**, **L**, **S**]

**Parameters** **D** = Enable **Direct Thermal Mode**, use this option when using direct thermal media in a thermal transfer printer.

**d** = Out of box default **Direct Thermal Mode** setting used in a 2844, 2824 or 3842 thermal transfer printer's and is displayed in the *Dump Mode status printout*. Changing the printer to thermal transfer mode or when the printer detects a transfer ribbon will cause this option parameter to permanently be removed from the status printout.

**L** = Enable **Label Dispense Mode - Tap to Print**. The printer will present each label and wait for a tap of the feed switch before printing the next label. Use this mode when printing multiple copies of liner-free labels.

**Fp**<sub>1</sub> = **Form Feed Setting**.

**p**<sub>1</sub> = Sets the type of operation the feed button .

**f** = Default, normal operation.  
Tap to feed.

**r** = Reprint last label printed.

**i** = Ignore the feed button.

## ○ Command - Hardware Options

**C** = Enable optional **Label Liner Cutter**. The cutter will cut at the end of each form as specified by the **Q** command.

**Cp**<sub>1</sub> = **Batch Print Labels and Liner Cut**.

**p**<sub>1</sub> = Sets the number of labels to print prior to cut.

If a number between 1 - 255 is specified for **p**<sub>1</sub>, the printer will cut after the specified number of labels have been printed.

If **b** is specified for **p**<sub>1</sub>, the "batch print & cut" feature is enabled. This feature uses the **P** command to control cutter operation.

**S** = Reverse the **Transmissive (Gap) Sensor Operation**.

**Examples:**

0	:disables all options.
0C	:enables cutter only, labels are cut after each label is printed, disables all other options
0D	:enables direct thermal mode on thermal transfer printers, disables all other options
0Cb	:labels are cut after a batch of five has printed,
...	:disables all other options
P5	:Sets the number of labels to print before the cut

## OEPL1 Command - Set Line Mode

---

**Description:** This command is used to switch the printer operating mode from Page Mode (EPL2) to Line Mode (EPL1 emulation).

Line Mode configuration setting is retained after reset has been issued or power has been cycled.

*Mobile printers, such as the TR 220, ignore this command.*

**Syntax** OEPL1

**Example:** OEPL1 ↵

**Returning to Page Mode** The Line Mode command **EPL2** can be sent to the printer to return the printer to Page (EPL2) Mode operation.

The **EPL2** command is preceded by an **ESC**ape (27 dec or 1Bh) character and followed by a line feed (**LF** - 10 dec or 0A hex), a carriage return (**CR** - 13 dec or 0D hex) or **CR/LF**.

**Example:** ↵EPL2 ↵

## P Command - Print

---

**Description** Use this command to print the contents of the image buffer.

**Syntax** Pp1, [p2]

**Parameters** p1 = Number of label sets.  
Range = 1 to 65535

p2 = Number of copies of each label (used in combination with counters to print multiple copies of the same label).  
Range = 1 to 65535



The **P** command cannot be used inside of a stored form sequence. For automatic printing of stored forms, use the **PA** command.

---

**Examples:** P1 ↵ :prints one label set  
P2,1 ↵ :prints 2 label sets of one label each  
P5,2 ↵ :prints 5 label sets of 2 labels each

## PA Command - Print Automatic

**Description** Use this command in a stored form sequence to automatically print the form (as soon as all variable data has been supplied).

**Syntax** **PA****p**<sub>1</sub>, [**p**<sub>2</sub>]

**Parameters** **p**<sub>1</sub> = Number of label sets. Can be variable data.  
Range: 1 to 9999

**p**<sub>2</sub> = Number of copies of the same label. Can be variable data.  
Range: 1 to 9999  
Sets the number of copies of each label (used in combination with counters) to print multiple copies of the same label. This value is only set when using counters.

**Example:** FK"1"␣ : delete form named "1"  
FS"1"␣ : start form store sequence  
V00,10,N,"prompt:"␣ : define variable 00  
V01,1,N,"prompt:"␣ : define variable 01  
V02,4,N,"prompt:"␣ : define variable 02  
A24,24,0,4,1,1,N,V00␣ : write a line of text including variable  
PAV01,V02␣ : print 1 label automatically  
FE␣ : end form store sequence  
  
FR"1"␣ : retrieve form "1"  
?␣ : get variables  
This Is Text␣ : data for V00  
3␣ : data for V01 = **p**<sub>1</sub> - number of sets  
2␣ : data for V02 = **p**<sub>2</sub> - number of copies


## q Command - Set Label Width

**Description** Use this command to set the width of the printable area of the media.


**Syntax** **qp**<sub>1</sub>

**Parameters** **p**<sub>1</sub> = The width of the label measured in dots. The **q** command will cause the image buffer to reformat and position to match the selected label width (**p**<sub>1</sub>).

**Image Buffer Positioning - Center Aligned Printers**

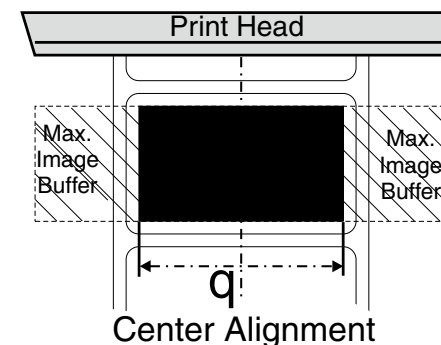

**Image Buffer Positioning - Left Aligned Printers**

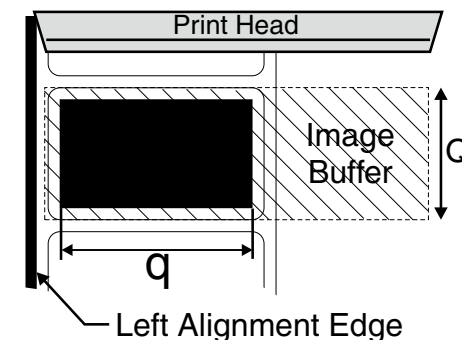

## q Command - Set Label Width



### All Printers

(Exceptions - 2746, 2746e & 2348)

This command will automatically set the left margin according to the following rules:

$$(\text{print head width} - \text{label width}) / 2$$



The **q** value affects the available print width. Minimizing the **q** value will maximize the print length and print speed (double buffering).



If the **R** Command (Reference Point) is sent after this command, the image buffer will be automatically re-formatted to match the width of the print head and is offset by the **R** command specified image buffer starting point, nullifying the **q** command.

**Example:** q416↵ :sets label width to 416 dots wide

## Q Command - Set Form Length

**Description** Use this command to set the form and gap length or black line thickness when using the transmissive (gap) sensor, black line sensor, or for setting the printer into the continuous media print mode.

The **Q** command will cause the printer to recalculate and reformat image buffer.

**Syntax** Qp<sub>1</sub>,p<sub>2</sub>[±p<sub>3</sub>]

**Parameters** p<sub>1</sub> = Label length measured in dots  
Default: Set by the AutoSense of media.  
**Maximum Value:** 65535 (dots)

- Distance between edges of the label or black line marks.
- For continuous mode, the p<sub>1</sub> parameter sets the feed distance between the end of one form and beginning of the next.

p<sub>2</sub> = Gap length or thickness of black line  
**Range:** 16-240 (dots) for 203 dpi printers  
[18-240 (dots) for 300dpi printers]

**Gap Mode** - By default, the printer is in Gap mode and parameters are set with the media AutoSense.

**Black Line Mode** - Set p<sub>2</sub> to **B** plus black line thickness in dots. See the Gap mode range.

### Continuous Media Mode

Set p<sub>2</sub> to 0 (zero)

The transmissive (gap) sensor will be used to detect the end of media.

±p<sub>3</sub> = Offset length measured in dots

- Required for black line** mode operation.
- Optional for Gap detect or continuous media modes. Use only positive offset values.

## Q Command - Set Form Length



**AutoSense routine does not detect black line or continuous media.**

All EPL2 printers have a transmissive (gap) sensor designed to detect the top of each label or tag. It does this in one of two ways:

- Sensing through the label liner at the gap between labels.
- Looking through a hole (notch) in the tag.

Printers equipped with a black line sensor can determine the top of each label or tag by sensing a “black line” preprinted on the media backing.



Sensor location is important when selecting the proper of label or tag type for printing. See the printer user’s manual for specific information on alignment, adjustment, and position of the transmissive (gap) or reflective (black line) sensors.



If the label size is not set properly, the printer may print off the edge of the label or tag and onto the backing or platen roller. Repeated printing off the edge of the label can cause excessive print head wear.

Maintain a minimum margin of 0.04 inches (1 mm) on all sides of the label.




Setting the label size to large can cause the printer to skip labels.

## Q Command - Set Form Length

*Examples:*

### Standard Label

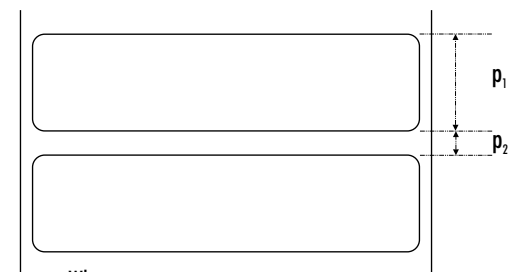

Where:


$p_1 = 20.0 \text{ mm (160 dots)}$

$p_2 = 3.0 \text{ mm (24 dots)}$

The Q command would be:

Q160,24↵

### Butterfly Label

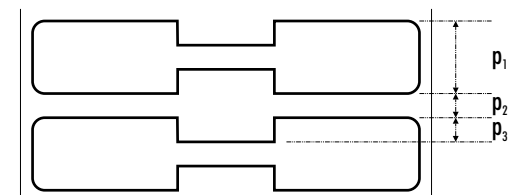

Where:

$p_1 = 12.5 \text{ mm (100 dots)}$

$p_2 = 3.0 \text{ mm (24 dots)}$

$p_3 = 3.0 \text{ mm (24 dots)}$


The Q command would be:

Q100,24+24↵



## Q Command - Set Form Length


### Black Line On Perforation

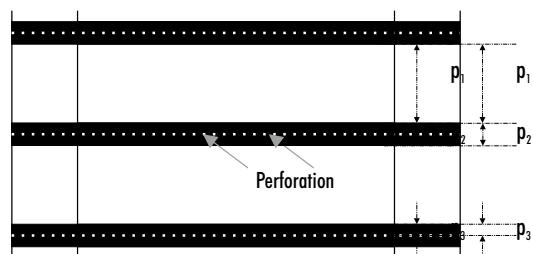

Where: Where:  
 $p_1 = 31.0 \text{ mm (248 dots)}$   
 $p_2 = 7.0 \text{ mm (56 dots)}$   
 $p_3 = 0.5 \text{ mm (4 dots)}$

The Q command would be:  
Q248,B56+4

### Black Line Between Perforation

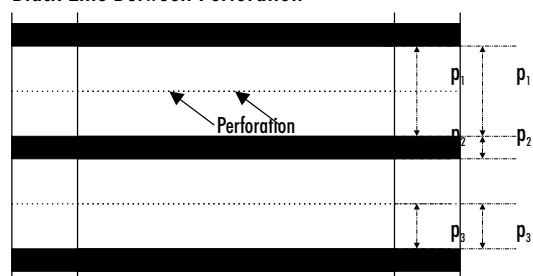

Where: Where:  
 $p_1 = 31.0 \text{ mm (248 dots)}$   
 $p_2 = 7.0 \text{ mm (56 dots)}$   
 $p_3 = 17 \text{ mm (136 dots)}$

The Q command would be:  
Q248,B56-136

## r Command - Set Double Buffer Mode

**Description:** Use this command to disable or reenable the double buffer image (label) printing. The double buffer feature is automatically tested and set by the **q** and **Q** commands.

*Mobile printers, such as the TR 220, ignore this command and automatically set the printer to single buffer mode.*

**Syntax:** **rp<sub>1</sub>**

**Parameters:** **p<sub>1</sub>** = **N** - Disable Double Buffer Mode  
**Y** - Re-enable the Double Buffer Mode if the printer memory supports the image buffer size set by **Q** and **q** parameters



The **rN** command must follow the **q** and **Q** commands in a form (label) program.



Verify the image buffer status with the **U** command(s). See page 2-2, for a sample of the Dump Mode Printout.

## R Command - Set Reference Point

**Description** Use this command to move the reference point for the X and Y axes. All horizontal and vertical measurements in other commands use the setting for **R** as the origin for measurements. Use the **R** command as an alternative to sending the **q** command to position (center) labels that are narrower than the print head.

**Syntax** **Rp<sub>1</sub>,p<sub>2</sub>**

**Parameters** **p<sub>1</sub>** = Horizontal (left) margin measured in dots.

**p<sub>2</sub>** = Vertical (top) margin measured in dots.

The **R** command interacts with image buffer setting, as follows:

- The **R** command forces the printer to use the full width of the print head as the width of the image buffer. The **R** command overrides the **q** commands print width setting.
- Rotate the image buffer with the **Z** command to establish top and left margins (**ZT**) or the bottom and right margins (**ZB**).
- When positioned correctly, prevents printing off two (2) edges of the label opposite the **0,0** reference point.



Use the **Q** and **R** commands together for the easiest method of positioning form elements in the print image in left aligned printers: 2746, 2746e, TLP2046 and 2344 (Eclipse).



Repeated printing off the edge of the label can cause excessive print head wear.

## S Command - Speed Select

**Description** Use this command to select the print speed.

*Mobile printers, such as the TR 220, ignore this command and automatically set speed to optimize battery use.*

**Syntax** **Sp<sub>1</sub>**

**Parameters** **p<sub>1</sub>** = Speed select value.

Model	Value	Speed
2722	0	1.0 ips (25 mm/s)
2742	1	1.5 ips (37 mm/s)
3742	2	2.0 ips (50 mm/s)
3842		
2824	1	1.5 ips (37 mm/s)
2844	2	2.0ips (50 mm/s)
	3	2.5 ips (63 mm/s)
	4	3.5 ips (83 mm/s)
2443 (Orion)	1	1.5 ips (37 mm/s)
	2	2.0ips (50 mm/s)
	3	2.5 ips (63 mm/s)
2746	2	2.0 ips (50 mm/s)
2746e	3	3.0 ips (75 mm/s)
2348	4	4.0 ips (100 mm/s)
Ht-146	5	5.0 ips (125 mm/s)
	6	6.0 ips (150 mm/s)
2684 (Strata)	1	1.0 ips (25 mm/s)
	2	2.0 ips (50 mm/s)
	3	3.0 ips (75 mm/s)
	4	4.0 ips (100 mm/s)

**Example:** **S2** ↓ :selects 2 ips (50 mmps)

## TD Command - Date Recall & Format Layout

**Description** Use this command to define the date format and print date data. The **TD** variable is inserted within a Text or Bar Code command's **DATA** parameter to print the date. The **TD** variable supports offsetting day by up to 253 days (see examples below for usage).



This command only works in printers equipped with the Real Time Clock time and date option.

**Syntax** **TD****p**<sub>1</sub>[|**p**<sub>2</sub>|**p**<sub>3</sub>]

**Parameters** **p**<sub>1</sub>, **p**<sub>2</sub>, **p**<sub>3</sub> = The parameters describe the format of the date display. At least one parameter must be supplied. Each parameter can be any of the acceptable values listed below.

Value	Description
<b>y2</b>	Year displayed as 2 digits (95)
<b>y4</b>	Year displayed as 4 digits (1995)
<b>me</b>	Month displayed as 3 letters (JAN)
<b>mn</b>	Month displayed as 2 digits (01)
<b>dd</b>	Day displayed as 2 digits (15)

| = Separator character. The separator may be any ASCII character value between 032 and 063. The separator character is printed between the results of each of the supplied parameters.

**Power-Up Default Format - mn-dd-y4**

**Examples:** If the current date is January 15, 2000:

TDy2/me/dd␣ :00/JAN/15  
 TDdd-me-y4␣ :15-JAN-2000  
 TDdd,mn,y4␣ :15,01,2000

TDdd/me/y2 :15/09/00  
 A100,100,0,4,1,2,N,"Today is"TD :Today is 15/09/00  
 A100,200,0,4,1,2,N,"Next Week-"TD+07 :Next Week-22/09/00  
 A100,300,0,4,1,2,N,"Next Month-"TD+30 :Next Month-15/10/00  
 A100,400,0,4,1,2,N,"Two Months-"TD+61 :Two Months-15/11/00

## TS Command - Set Real Time Clock

**Description** Use this command to set the time and date in printers equipped with the Real Time Clock option.

**Syntax** **TS****p**<sub>1</sub>,**p**<sub>2</sub>,**p**<sub>3</sub>,**p**<sub>4</sub>,**p**<sub>5</sub>,**p**<sub>6</sub>

**Parameters** **p**<sub>1</sub> = Month  
 Range: **01 to 12**

**p**<sub>2</sub> = Day  
 Range: **01 to 31**

**p**<sub>3</sub> = Year  
 Last two digits of Year (e.g. 95)  
 Range: Years 1991- 1999 = **90-99**  
 Years 2000- 2090 = **00-89**

**p**<sub>4</sub> = Hour in 24 hour format  
 Range: **00 to 23**

**p**<sub>5</sub> = Minutes  
 Range: **00 to 59**

**p**<sub>6</sub> = Seconds  
 Range: **00 to 59**

**Example:** TS01,01,95,01,00,00 : sets the date to Jan. 1, 1995  
 : and the time to 1:00 a.m.  
 TS12,31,01,15,31,00 : sets the date to Dec. 31, 2001  
 : and the time to 3:31 p.m.

## TT Command - Time Recall & Format Layout

**Description** Use this command to define the time format and print time data. The **TT** variable is inserted within a Text or Bar Code command's **DATA** parameter to print the time.



This command works only in printers equipped with the Real Time Clock (RTC) time and date option.

**Syntax** **TT****p**<sub>1</sub>[**|****p**<sub>2</sub>**|****p**<sub>3</sub>][**+**]

**Parameters** **p**<sub>1</sub>, **p**<sub>2</sub>, **p**<sub>3</sub> = **h**, **m**, or **s**

These parameters describe the format of the time display.

- At least one parameter must be supplied.
- Each parameter can be any of the values **h**, **m**, or **s** and are described below.

Value	Description
<b>h</b>	Hours displayed as 2 digits (e.g. 01)
<b>m</b>	Minutes displayed as 2 digits (e.g. 15)
<b>s</b>	Seconds displayed as 2 digits (e.g. 00)

**[+]** = Enable 12 Hour clock format  
Appending a + to the end of the command string selects 12 hour clock mode. The times will display with an "AM" or "PM" indicator. **Default** (no +) = **24 hour clock mode**

**|** = Separator character  
The separator may be any ASCII character value between 032 and 063. The separator character is printed between the results of each of the supplied parameters.

**Power-Up Default Format - h:m:s**

**Examples:** If the current time is 1:25 p.m.:

TT:h:m:s+ ↵ : 01:25:00  
TT:h,m ↵ : 13,25  
TT:h+ ↵ : 01 PM

## U Command - Print Configuration (General)

**Description** Use this command to print the current printer configuration for page mode printing. The printout is the same the Dump Mode printout initiated by the printer's AutoSense routine. The printer does not enter Dump Mode.

See page 2-2 for a description of this printout.

**Syntax** **U**

**Example:** U ↵

**Will Produce:**

```
4" Is-237 V4.03.50XF 039
Serial port:96,N,8,1
Page Mode 200dpi USB
-----
Image buffer size:0507K
Fmem:001.0K,060.4K avl
Gmem:006K,0587K avl
Emem:000K,0587K avl
I8,1,001 rY JF
S6 D07 R032,000 ZT US WY
q0832 01010,026
Option:
08 10 12

Date:04-09-98
Time:20:06:25
```

## **UA Command - Enable Clear Label Counter Mode**

---

**Description** This command sets the printer to clear (empty) the print buffer if a media out condition is detected.

**Syntax UA**

A power cycle, reset, or **UB** command will clear this setting.

Normal (default) operation for the printer is to resume printing if the empty roll is replaced with new roll (or ribbon) and finish print any labels in the process of printing prior to a media out condition, including batch print jobs.

**Example:** UA↵

## **UB Command - Reset Label Counter Mode**

---

**Description** Use this command to clear the **UA** command and restore the default setting to allow the printer to resume printing a batch job if a paper empty occurs. The page mode (EPL2) printer, by default, will resume printing if the empty roll is replaced with new roll (or ribbon) and finish a batch print job.

**Syntax UB**

**Example:** UB↵

## UE Command - External Font Information Inquiry

---

**Description** This command will cause the printer to send information about external fonts currently stored in the printer back to the host.

**Syntax UE**  
The printer will send the number of external fonts stored and each font's name, height and direction, to the host through the RS-232 port.

**Example:** UE↵

**Will Produce:** ### :number of external fonts  
A,xxx,y :first font  
... :A=fontname  
... :xxx=font height in dots  
... :y=direction (0=0°, 1=90°, 2=both)  
A,xxx,y :last font

## UF Command - Form Information Inquiry

---

**Description** This command will cause the printer to send information about forms currently stored in the printer back to the host.

**Syntax UF**  
The printer will send the number of forms stored and each form's name to the host through the RS-232 port.

**Example:** UF↵

**Will Produce:** ### :number of forms  
FORMNAME1 : first form name  
FORMNAME2 :second form name  
...  
FORMNAME<sub>n</sub> :last form name

## UG Command - Graphics Information Inquiry

---

**Description** This command will cause the printer to send information about graphics currently stored in the printer back to the host.

**Syntax** **UG**

The printer will send the number of graphics stored and each graphic's name to the host through the RS-232 port.

**Example:** UG␣

**Will Produce:** ### :number of graphics  
GRAPHICNAME1 : first graphic name  
GRAPHICNAME2 : second graphic name  
...  
GRAPHICNAME<sub>n</sub> :last graphic name

## UI Command - Host Prompts/Codepage Inquiry

---

**Description** This command will cause the printer to enable prompts to be sent to the host and it will send the currently selected codepage to the host through the RS-232 port.

This command also disables software flow control (XON/XOFF). Hardware flow control is not disabled (DTR/CTS). To restart software flow control a reset ( ^@ command) or power must be recycled.

**Syntax** **UIp<sub>1</sub>,p<sub>2</sub>,p<sub>3</sub>**

The printer will send information about the currently selected code page back to the host in the following format:

**p<sub>1</sub>** = Number of data bits.

**p<sub>2</sub>** = Code page.

**p<sub>3</sub>** = Country code.



The KDU automatically sends this command each time power is applied.

---

**Example:** UI␣

**See Also:** **I** and **U** commands.

## UM Command - Codepage & Memory Inquiry

---

**Description** This command will cause the printer to **send to the host** the currently selected codepage and memory status through the RS-232 port.

This command also disables software flow control (XON/XOFF). Hardware flow control is not disabled (DTR/CTS). To restart software flow control a reset (^@ command) or power must be recycled.

**Syntax** **UM**

The printer will send information about the currently selected code page and memory status back to the host in the following format:

**UM****p<sub>1</sub>p<sub>2</sub>p<sub>3</sub>p<sub>4</sub>p<sub>5</sub>p<sub>6</sub>p<sub>7</sub>p<sub>8</sub>**

**p<sub>1</sub>** = Image buffer size in KBytes.

**p<sub>2</sub>** = Form memory allocation size in KBytes.

**p<sub>3</sub>** = Form memory free in KBytes.

**p<sub>4</sub>** = Graphic memory allocation size in KBytes.

**p<sub>5</sub>** = Graphic memory free in KBytes.

**p<sub>6</sub>** = External font memory allocation size in KBytes.

**p<sub>7</sub>** = External font memory free in KBytes.

**p<sub>8</sub>** = Appends a response in the **UI** command data format. See **UI** command on page 3-107.

**Example:** UM↵

**See Also:** **I**, **M**, **U**, **UI** and **UP** commands.

## UN Command - Disable Error Reporting

---

**Description** Cancels **US** command

**Syntax** **UN**



## UP Command - Codepage & Memory Inquiry/Print

**Description** This command will cause the printer to **print and send** the currently selected codepage and memory **status to the host** through the RS-232 port.

This command also disables software flow control (XON/XOFF). Hardware flow control is not disabled (DTR/CTS). To restart software flow control a reset ( ^@ command) or power must be recycled.

### Syntax **UP**

The printer will send information about the currently selected code page and memory status back to the host followed by printing the current printer configuration. For an example of the configuration printout, see the **U** command.

The format of data sent to the host is as follows:

**UP****p<sub>1</sub>,p<sub>2</sub>,p<sub>3</sub>,p<sub>4</sub>,p<sub>5</sub>,p<sub>6</sub>,p<sub>7</sub>,p<sub>8</sub>,p<sub>9</sub>**

**p<sub>1</sub>** = Image buffer size in KBytes.

**p<sub>2</sub>** = Form memory allocation size in KBytes.

**p<sub>3</sub>** = Form memory free in KBytes.

**p<sub>4</sub>** = Graphic memory allocation size in KBytes.

**p<sub>5</sub>** = Graphic memory free in KBytes.

**p<sub>6</sub>** = External font memory allocation size in KBytes.

**p<sub>7</sub>** = External font memory free in KBytes.

**p<sub>8</sub>** = Appends a response in the **UI** command data format. See **UI** command on page 3-107.

**Example:** UP↵

See Also **I**, **M**, **U**, **UI** and **UM** commands.

## UQ Command - Configuration Inquiry

**Description** Use this command to send the printer configuration information back to the host via the serial port.

### Syntax **UQ**

The printer will send the printer configuration, line by line, in ASCII to the host through the RS-232 port. The information matches the configuration information printed in final phase of the printer's AutoSense routine, the Dump Mode Printout or the **U** command printout.

The information and number of lines of data sent by the printer will vary from printer to printer depending upon the type of printer and options installed.

**Example:** UQ↵

## US Command - Enable Error Reporting

**Description** Use this command to enable the printer's status reporting feature.

- **Serial Port** - If an error occurs, the printer will send a NACK(0x15), followed by the error number, to the computer. If no errors occur, the printer will echo ACK(0x6) after each **P** command.

If paper or ribbon empty occurs, the printer will send, through the serial port, a"-07" and "Pnnn" where nnn is the number of labels remaining to print.

- **Parallel Port** - If an error occurs, the printer will print the error number and the printer's indicator(s) LED will indicate an error condition. See the individual printer user's manual for details.
- **Mobile Printers Only** (TR220) - *Additionally enables command error reporting via printer's status indicator. The indicator is turned off by default for this printer only.*

**Syntax** **US**[**p<sub>1</sub>**]

The printer's default setting is disabled error reporting.

**Parameters** **p<sub>1</sub> = 1** **Optional Parameter**

If no errors occur, the printer will echo ACK(0x6) after each label that is successfully printed.

Use the **UN** command to disable error reporting.

## US Command - Enable Error Reporting

Code	Error/Status Description
00	No Error
01	Syntax Error
02	Object Exceeded Label Border
03	Bar Code Data Length Error (e.g.: EAN-13 is a 12 or 13 digit only)
04	Insufficient Memory to Store Data
05	Memory Configuration Error
06	RS-232 Interface Error
07	Paper or Ribbon Empty
08	Duplicate Name: Form, Graphic or Soft Font
09	Name Not Found: Form, Graphic or Soft Font
10	Not in Data Entry Mode
11	Print Head Up (Open)
12	Pause Mode or Paused in Peel mode
13	Mobile Printers: Print head too hot
14	Mobile Printers: Motor too hot
15	Mobile Printers: Battery low warning ( $\geq 40\%$ )
16	Mobile Printers: Battery low limit ( $\geq 20\%$ )
50	Does not fit in area specified
51	Data length too long
84	Media Error or Blackline not detected
93	PDF-417 coded data too large to fit in bar code

## U\$ Command - Host Prompts/Battery Status

**Description** Mobile Printers Only (TR 220) - This command will cause the printer to **send to the host** the battery charge status.

### Syntax U\$

The printer will send information about battery charge status in increments of 10 percent. The printer uses the data format of **VccNNN%**, where **NNN** represents the battery's charge level.



EPL Mobile printers suspend all new printing operations, including printer to host communication, until the battery charge level is greater than 10%.

Print jobs or forms (single label or batch operations) will continue processing until finished.

The mobile printer will accept new commands and print after the battery charge is greater than 10%.

**Example:** U\$  
: Command sent to printer  
: Printer responds with  
: **Vcc90%**

## V Command - Define Variable

**Description** Use this command to define variable data for the text and bar code data fields in stored forms. Variable data can be combined with fixed data or other data types (counter, date, etc..) in text or bar code data fields.

### Syntax Vp<sub>1</sub>.p<sub>2</sub>.p<sub>3</sub>,"[-]PROMPT"

**Parameters** p<sub>1</sub> = Variable number.  
Range: **00 to 99**.  
Variable (reference) numbers are sequential and must be input into a form in ascending order.

p<sub>2</sub> = Maximum number of characters  
Range: **1 to 99**.  
This is the maximum number of characters allowed in the variable field.

p<sub>3</sub> = Field Justification.  
**L** = Left      **R** = Right  
**C** = Center    **N** = No Justification  
**Note:** Right and center justification does not apply to soft fonts.

**"PROMPT"** = An ASCII text field that will be transmitted to the host (via the serial interface) each time this command is executed.

Use the prompt to ask for a value to be entered for the variable.

**KDU Options** [-] = Having the first character of the prompt a single minus sign will cause the prompt to display only once after form retrieval.

**KDU Character Number Limit** The KDU allows a maximum of 40 characters for entry into a variable data field and display.

KDU Range (p<sub>2</sub>): **1 to 40**, but not to exceed a total of 1500 bytes for all variables.

## V Command - Define Variable

Use this command in forms that require unique data on each label. When initializing variables:

- They must be defined in order (e.g. **V00** first, **V01** second...)
- They must be the next entries after the **FS"FORMNAME"** command
- They must be located before any counter variables.
- Variables must not contain the NULL character (0 dec.;00 hex.). The NULL character is an illegal text character.

To print the contents of the variable, the variable number is referenced in the **"DATA"** field of the **A** (ASCII text) or **B** (Bar Code) commands.

The field justification parameter effects the way the variable will be printed. When **L** or **R** are selected, the variable value will be printed left or right justified in an area with a width defined by **P2** parameter.



The maximum amount of data stored as variable data, including counter variables and data reference overhead can not exceed 1500 bytes.



**KDU Support:** Internally stored variable data fields are reset after cycling printer power or sending a reset command or pressing the Cancel.

*Example:* V00,15,N,"Enter Product Name:" ↵

## W Command - Windows Mode

**Description** This command is used to disable/re-enable the Windows command mode.

**Syntax** **Wp1**

**Parameters** **p1** = Windows Mode Enabled.  
Values = **Y** for enabled (default)  
**N** for disabled

When enabled, the printer will accept Windows mode escape sequences to print data. When disabled, escape sequences will be ignored.

The Windows mode escape sequences are only used by the optional Windows printer driver. When working with a main frame or other non-Windows host, this mode can be disabled to prevent erratic operation.

## xa Command - AutoSense

**Description** This command is used to have the printer detect the label and gap length and set the sensor levels. This command will not enter into the Dump mode or print the printer configuration label.

**Syntax** xa↵

**Example:** xa↵  
:The printer will feed labels and  
: measure the labels to set the Q values  
: (label & gap length) and the sensor  
: levels.  
: The printer is at Top of Form (TOF)  
: and ready to print .

## X Command - Box Draw

**Description** Use this command to draw a box shape.

**Syntax** Xp<sub>1</sub>,p<sub>2</sub>,p<sub>3</sub>,p<sub>4</sub>,p<sub>5</sub>

Parameters

p<sub>1</sub> = Horizontal start position (X) in dots.

p<sub>2</sub> = Vertical start position (Y) in dots.


p<sub>3</sub> = Line thickness in dots.

p<sub>4</sub> = Horizontal end position (X) in dots.

p<sub>5</sub> = Vertical end position (Y) in dots.

**Example:** N↵  
X50,200,5,400,20↵  
X200,50,10,20,400↵  
P1↵

**Will Produce:**

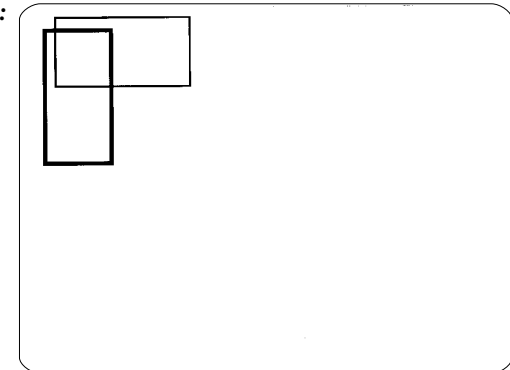

## Y Command - Serial Port Setup

**Description** Use this command to establish the serial port communication parameters.

**Syntax** **Y****p**<sub>1</sub>**p**<sub>2</sub>**p**<sub>3</sub>**p**<sub>4</sub>

**Parameters** **p**<sub>1</sub> = Baud rate

<b>p</b> <sub>1</sub>	<b>Description</b>
11	115,200 baud
38	38,400 baud
19	19,200 baud
96	9,600 baud
48	4,800 baud
24	2,400 baud
12	1,200 baud

**p**<sub>2</sub> = Parity.

Values: **O** = Odd parity  
**E** = Even parity  
**N** = No parity

**p**<sub>3</sub> = # Data bits.

Values: **7** = Seven data bits  
**8** = Eight data bits

**p**<sub>4</sub> = # Stop bits.

Values: **1** = One stop bit  
**2** = Two stop bits.

After receiving this command, the printer will automatically reset enabling the new rate.



To send commands and data to the printer, the host's serial port parameters must match the printer's serial port parameters. Verify the printer's configuration settings with the AutoSense/Dump Mode Printout, see the printer's user's manual for details.

**The printer's default serial port parameters are:**  
**9600 baud, No Parity, 8 Data Bits, 1 Stop Bit**

Change the printer's serial port parameters with the **Y** command after communication has been established with the host. The host parameters must then be changed to resume communication.

**Example:** Y19,0,7,1 ↵ :sets 19,200 baud, odd parity,  
:7 data bits and 1 stop bit.

## Z Command - Print Direction

**Description** Use this command to select the print orientation.

**Syntax** **Z****p**<sub>1</sub>

**Parameters** **p**<sub>1</sub> = Print orientation.

**T** = Printing from top of image buffer.

**B** = Printing from bottom of image buffer.

Default Orientation = **T**



The top of the image buffer prints first and is viewed by the operator as printing up side down.

**Example:** N ↵

ZT ↵

GG10,10,"WORLD" ↵

A10,200,0,3,1,1,N,"This Graphic Was Printed With Orientation Set To

ZT" ↵

P1 ↵

N ↵

ZB ↵

GG10,10,"WORLD" ↵


A10,200,0,3,1,1,N,"This Graphic Was Printed With Orientation Set To

ZB" ↵

P1 ↵

**Will Produce:**

Print Direction ↑

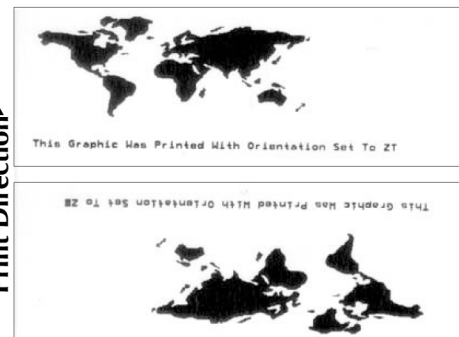

## ? Command - Download Variables

**Description** This command signals the printer to “fill-in” variable or counter “prompt” data field.

The host system can send data representing variables and/or counters to the printer after a stored form containing variables and/or counters has been retrieved.

*Syntax* ?  
**DATA**

The amount of data following the question mark line must match exactly the order and total number of variables and/or counters for that specific form.

Data must be entered, as follows:

- Each **DATA** line represents a variable or counter data field fill-in.
- Variables in ascending order (e.g. **V00** first, **V01** second...)
- Counters in ascending order following Variables (e.g. **C0** first, **C1** second...)

### Example

FK"form1" ↓ :delete form "form1"  
 FS"form1" ↓ :begins the form store  
 V00,15,N,"Enter Part Name:" ↓  
 V01,5,N,"Enter Quantity:" ↓  
 A50,10,0,3,1,1,N,V00 ↓  
 A50,400,0,3,1,1,N,"Quantity: "V01 ↓  
 FE ↓ :ends form store sequence

FR"form1"	:retrieve for "form1"
?	:variables follow
Screws	:first variable
235	:second variable
P1	:print one label

**^@ Command - Reset Printer**

**Description** This command is used to reset the printer.

**Syntax**  $\wedge @ \downarrow$  :where  $\wedge$  is 94 decimal

This command emulates Power Off and then Power On; thus reinitializing the printer.

- The reset command is unavailable during the operation of storing PCX graphics, soft fonts or while the printer is in dump mode.
- The reset command cannot be used in a stored form.
- The reset command can be sent to the printer during all other printing operations.
- The printer will ignore all commands sent while the reset command is executing, up to 2 seconds.

**Example:** ^@ :The printer will reset

## **^default Command - Set Printer to Factory Defaults**

**Description:** Use this command to return the printer to its default configuration.

The **^default** command resets the density, speed, sensors, image buffer parameters, character code page (including re-mapped characters), options, feed button behaviors, gap mode media sensing, serial interface configuration, error reporting and line mode configuration defaults.

This command is intended for troubleshooting and by service organizations. Do not use this command in regular programming! Do not use this command to initialize the printer! This overwrites all stored parameters. The programmer should always minimize writing to the non-volatile 'flash' printer memory.

*Supported by firmware versions 4.30 and above.*

**Syntax:** **^default**

**Parameters:** **None**

## **^ee Command - Error Report - Immediate**

**Description:** Use this command to get printer error and status report immediately. The **^ee** command must be sent via the RS-232 serial interface.

*Mobile printers, such as the TR 220, ignore this command.*

The printer will report 4 bytes back to host in the following format:

XX<CR><LF>

XX = Error/Status code  
<CR> = Carriage Return (ASCII 13 dec.)  
<LF> = Line Feed (ASCII 10 dec.)

**Syntax:** **^ee**

**Parameters:** **None**

Code	Error/Status Description
00	No Error
01	Syntax Error
02	Object Exceeded Label Border
03	Bar Code Data Length Error (e.g.: EAN-13 is a 12 or 13 digit only)
04	Insufficient Memory to Store Data
05	Memory Configuration Error
06	RS-232 Interface Error
07	Paper or Ribbon Empty
08	Duplicate Name: Form, Graphic or Soft Font
09	Name Not Found: Form, Graphic or Soft Font
10	Not in Data Entry Mode (See ? Command)
11	Print Head Up (Open)
12	Pause Mode or Paused in Peel mode
50	Printer Busy - Processing Print Job
80*	Undefined
81*	Cutter Jammed or Not Installed
82*	AutoSense or Sensor Failure
83*	Illegal Interrupt occurred
84*	Excessive Media Feeding

\* - Requires Intervention: Press Feed or Reset (^@ command)



## **; Command - Code Comment Line**

---

**Description** This command signals the printer to ignore the following data. All data between the line initiating semicolon character (**;** ) and the next line feed (**LF**) character (which terminates all command lines) will be ignored.

*Supported by firmware versions 4.30 and above.*

**Syntax** **;** Comment data

### **Example**

**;** This is used for xxxXXX↵ : "This is used for xxxXXX"  
: is ignored by the printer.

## **Appendix A - Character References**

This section has character references.

---

**Resident Fonts 1-5** Page Mode supports 5 different font sizes, numbered 1-5. Each font can be expanded both horizontally and vertically. All fonts are non-proportional, mono-spaced. The ASCII value of each character is dependent on the **I** command character set (code page) selection.

1. ABCDEFGHIJKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz  
0123456789 !@#\$%^&\*()\_+<>?[]:;

2. ABCDEFGHIJKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz  
0123456789 !@#\$%^&\*()\_+<>?[]:;

3. ABCDEFGHIJKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz  
0123456789 !@#\$%^&\*()\_+<>?[]:;

4. ABCDEFGHIJKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz  
0123456789 !@#\$%^&\*()\_+<>?[]:;

**5. ABCDEFGHIJKLMNOPQRST  
0123456789    # \$ % &**

## Default Character Map Code Page - 437

0	16	32	48	64	80	96	112	128	144	160	176	192	208	224	240
1	17	33	49	65	81	97	113	129	145	161	177	193	209	225	241
2	18	34	50	66	82	98	114	130	146	162	178	194	210	226	242
3	19	35	51	67	83	99	115	131	147	163	179	195	211	227	243
4	20	36	52	68	84	100	116	132	148	164	180	196	212	228	244
5	21	37	53	69	85	101	117	133	149	165	181	197	213	229	245
6	22	38	54	70	86	102	118	134	150	166	182	198	214	230	246
7	23	39	55	71	87	103	119	135	151	167	183	199	215	231	247
8	24	40	56	72	88	104	120	136	152	168	184	200	216	232	248
9	25	41	57	73	89	105	121	137	153	169	185	201	217	233	249
10	26	42	58	74	90	106	122	138	154	170	186	202	218	234	250
11	27	43	59	75	91	107	123	139	155	171	187	203	219	235	251
12	28	44	60	76	92	108	124	140	156	172	188	204	220	236	252
13	29	45	61	77	93	109	125	141	157	173	189	205	221	237	253
14	30	46	62	78	94	110	126	142	158	174	190	206	222	238	254
15	31	47	63	79	95	111	127	143	159	175	191	207	223	239	255

Fonts 1-4 are represented by the shaded and unshaded cells and Font 5 only supports shaded cells.

See the **I** command to for more information on selecting available code pages, page 3-63. The electronic manual version on the user's CD includes links to the individual code pages.

**Euro Character** Page mode printing supports the Euro character with a character substitution command, the **oR** command. The Font 5 character set does not support the typical implementation of the Euro character position at 213 decimal (D5 hexadecimal).

**Dump Mode Character Map** The printer's Dump Mode is used to trouble-shoot programming. The printer will print all data as sent in Dump Mode Characters, shown below.

		Hexidecimal - Most Significant Digit															
		0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Hexidecimal - Least Significant Digit	0	00 0	►		0	@	P	`	p	€	•	°	À	Ð	à	ð	
	1	01 1	😊	!	1	A	Q	a	q	•	‘	±	Á	Ñ	á	ñ	
	2	02 2	↕	"	2	B	R	b	r	,	’	²	Â	Ò	â	ò	
	3	03 3	©	#	3	C	S	c	s	f	“	£	Ã	Ó	ã	ó	
	4	04 4	“	¶	\$	4	D	T	d	t	”	□	Ä	Ö	ä	ö	
	5	05 5	§	§	%	5	E	U	e	u	...	¥	µ	Å	Ö	ö	
	6	06 6	—	&	6	F	V	f	v	†	—	ı	Æ	Ö	æ	ö	
	7	07 7	•	↕	'	7	G	W	g	w	‡	—	§	·	Ç	×	
	8	08 8	◻	↑	(	8	H	X	h	x	^	~	“	È	Ø	è	
	9	09 9	○	↓	)	9	I	Y	i	y	‰	™	©	ı	É	Ù	
	A	0A 10	◼	→	*	:	J	Z	j	z	Š	š	ˆ	°	Ê	Ú	
	B	0B 11	G	←	+	;	K	[	k	{	<	>	«	»	Ë	Û	
	C	0C 12	E	└	,	<	L	\	l		œ	œ	¬	¼	Ì	Ü	
	D	0D 13	↔	↔	-	=	M	]	m	}	•	•	½	½	Í	Ý	
	E	0E 14	♪	▲	.	>	N	^	n	~	Ž	ž	®	¾	Î	Ë	
	F	0F 15	C	▼	/	?	O	o	◻	•	Ÿ	—	ı	İ	ß	İ	

## Appendix B - Cash Drawer Kicker Option


This section has hardware and programming for the Cash Drawer Kicker.

---

**Introduction** The cash drawer kicker is a factory option only. The printer requires a special PCBA to support this option. At the time of publication, the 2824 printer is the only page mode printer model supporting the cash drawer kicker option. Check our web site or your dealer for further updates.

---

**Cash Drawer Cable Wiring** The figure below displays the pin assignments for the printer's retail cash drawer interface. Refer to the cash draw manufacturer's documentation for proper drawer wiring.

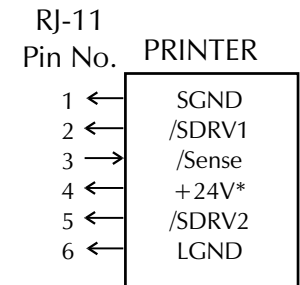

### Male RJ-11

\*+24 volts D.C. at no greater than 1.5 amps.

## **<Esc>p Command - Generate Pulse CDK**

---

**Description** Generate a drawer kicker pulse.

**Syntax** **<Esc>pp<sub>1</sub> p<sub>2</sub> p<sub>3</sub>**

**Parameters** **p<sub>1</sub>** = Select Drawer  
Drawer 1 (SDRV1) = 31 hex.

**p<sub>2</sub>** = Pulse width in multiples of two milli- seconds (2 msec).  
Range = 00 - FF hex.

**p<sub>3</sub>** = This parameter must be present for parsing the command but the value is ignored by the printer.  
Range = 00 - FF hex.

**ASCII Hex Value** 1B 70 **p<sub>1</sub>p<sub>2</sub>p<sub>3</sub>**  
(**p<sub>1</sub>** represent value 31 hex;  
**p<sub>2</sub>** represent value range 00 to FF hex;  
**p<sub>3</sub>** represent value range 00 to FF hex)

**Example** **<Esc>p1Bd**  
: **<Esc>p** = **<Esc>p** , the command  
: 1 = p1 parameter value of 31 hex.  
: B = p2 parameter value of 42 hex. for  
: 132 msec pulse (66 x 2msec)  
: d = p3 parameter value of 64 hex.  
: A character is needed for command to  
: be processed.

## **<Esc>u Command - CDK Status**

---

**Description** Report the cash drawer kicker's status.

**Syntax** **<Esc>u**

**Parameters** **None**

**Status** **00** hex. = Cash Drawer Open

**01** hex. = Cash Drawer Closed



**J. STEPHEN Lab., Ltd.**

374-2, Gajang-dong, Osan-si, Gyeonggi-do, 447-210, Korea

TEL : +82-31-459-8200 FAX : +82-31-459-8880

[www.miniprinter.com](http://www.miniprinter.com)